

01 SIDEBAR

Full-channel display of bilateral sidebar

» ————— Click to show the left sidebar

Click to hide the sidebar ————— »

Click to return homepage ————— 🏠

Click to start quick annotation ————— ✎

Quick access to the channel ————— 📺


Multitask windows ————— 🖥️

More functions ————— 🗄️

Click to return to the previous step ————— ↩️

02-1 OSD MENU

Sound mode

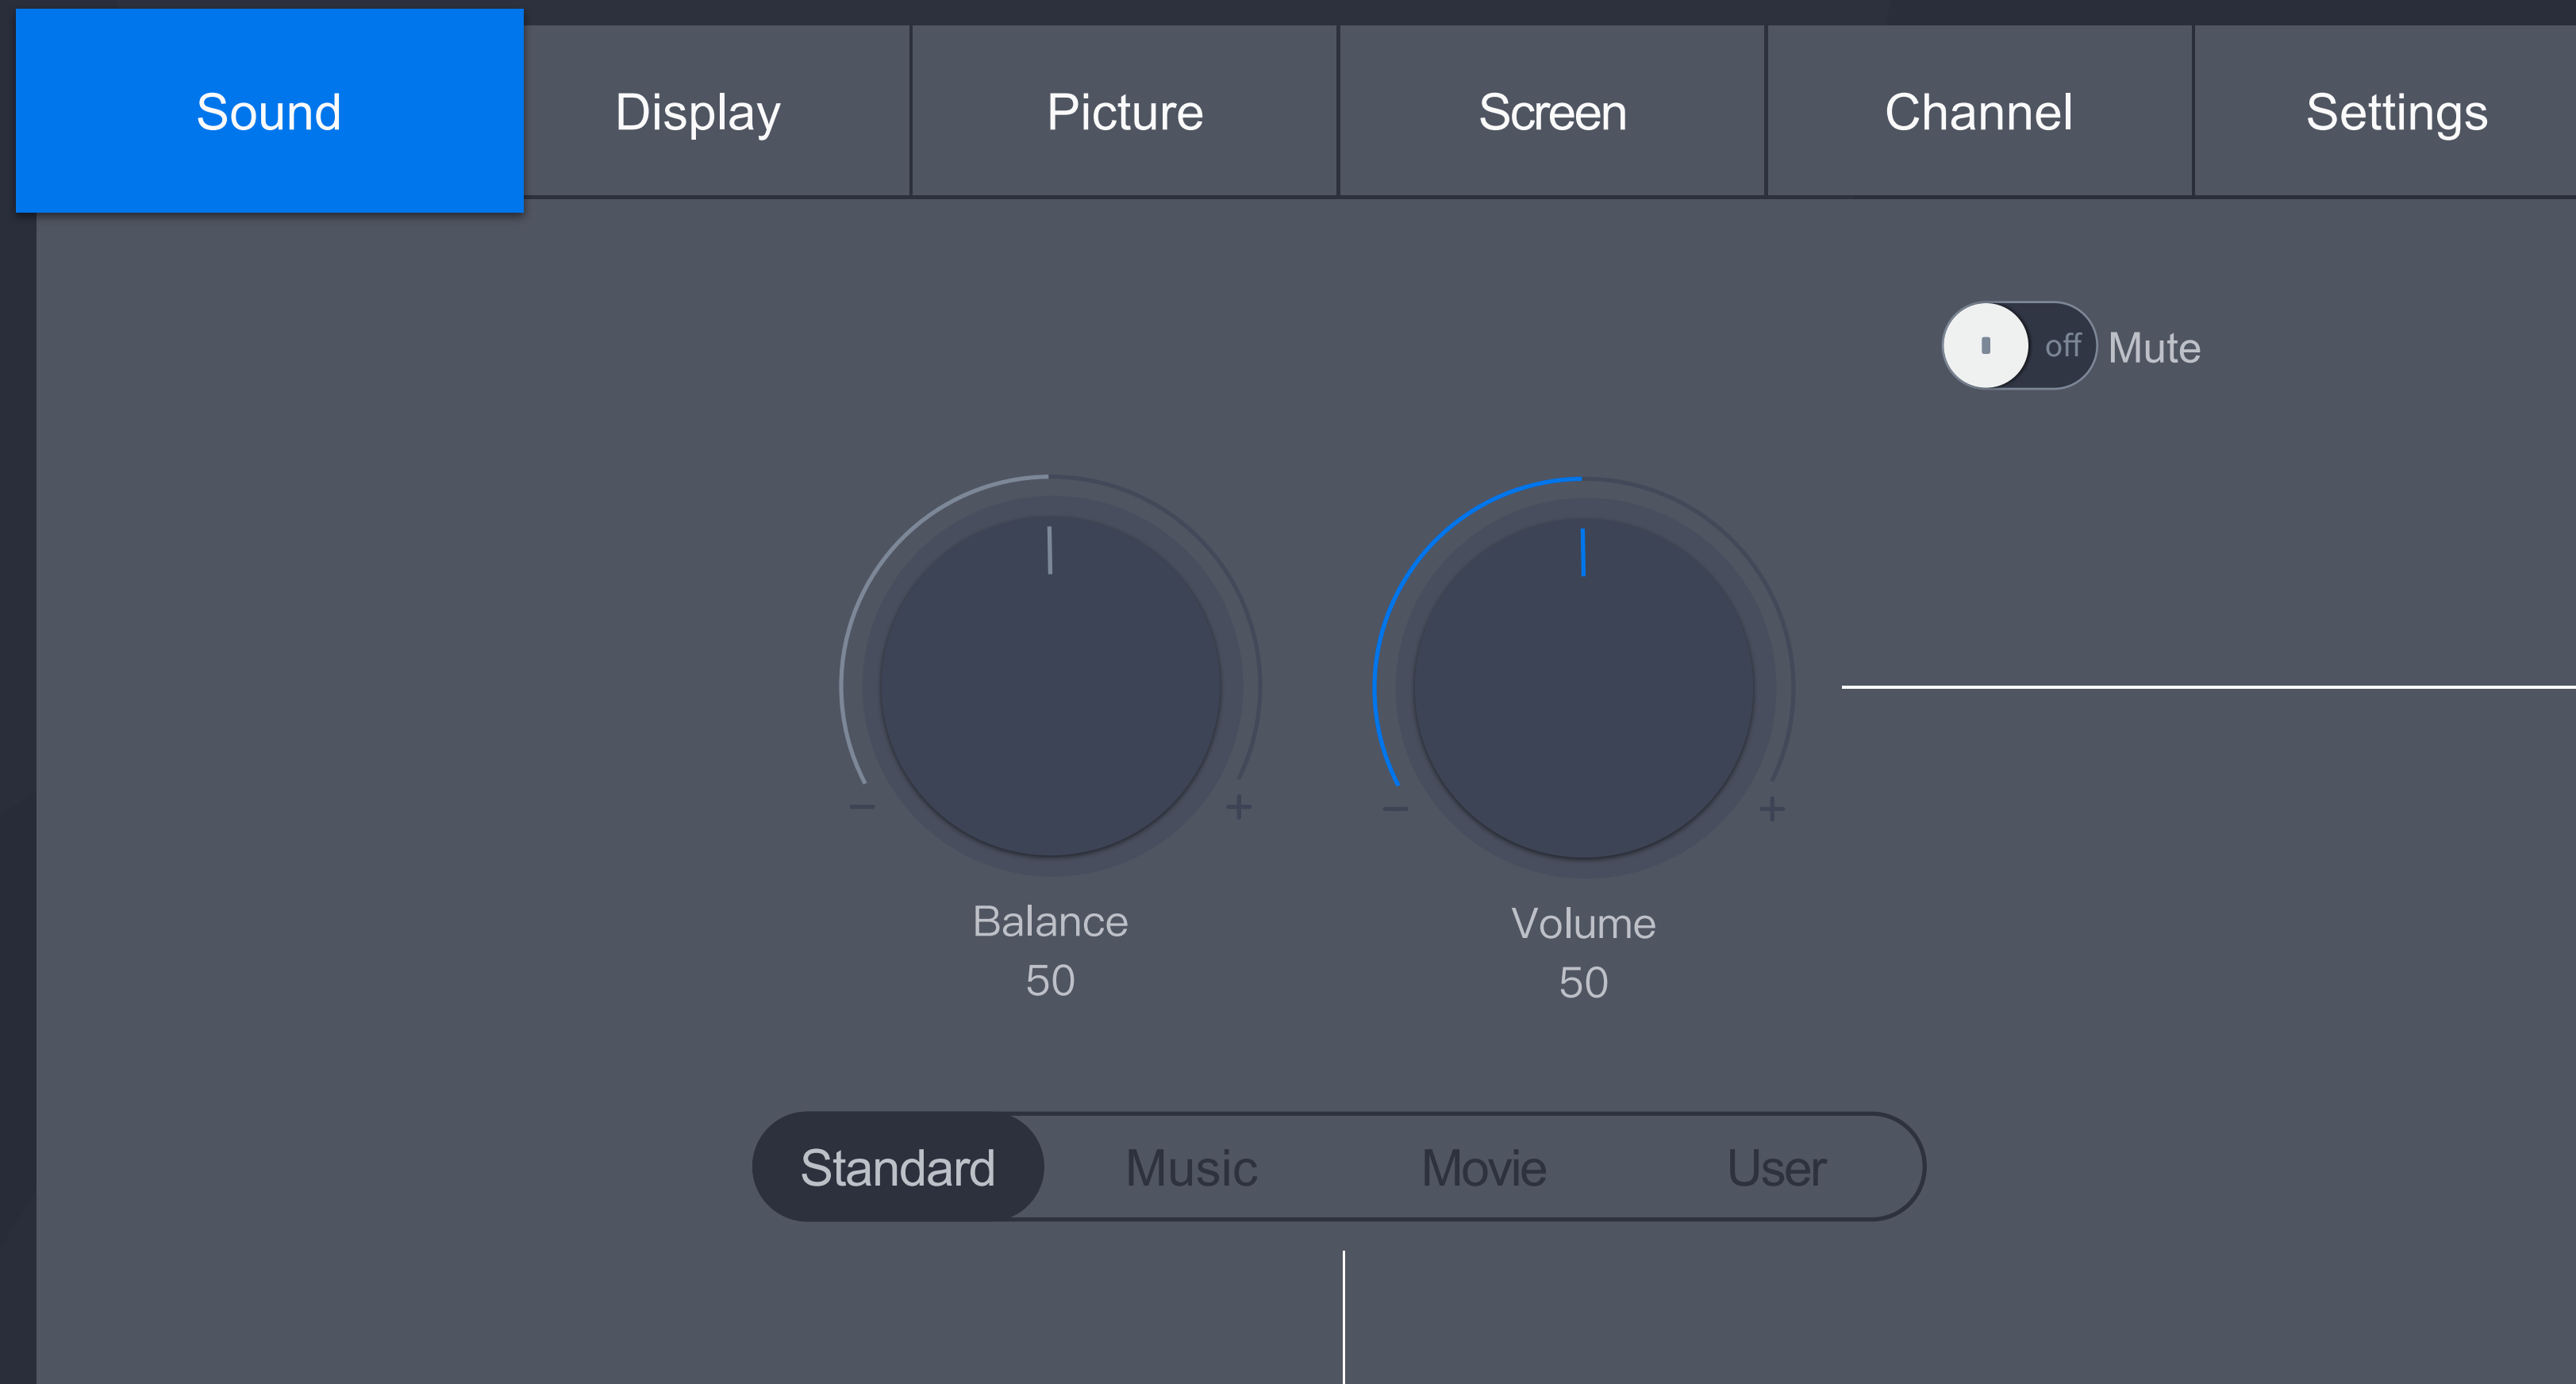


Through clockwise/
anticlockwise
rotating knob to
increase/decrease
volume

Click the button to switch Preset sound mode

02-2 OSD MENU

Display setting

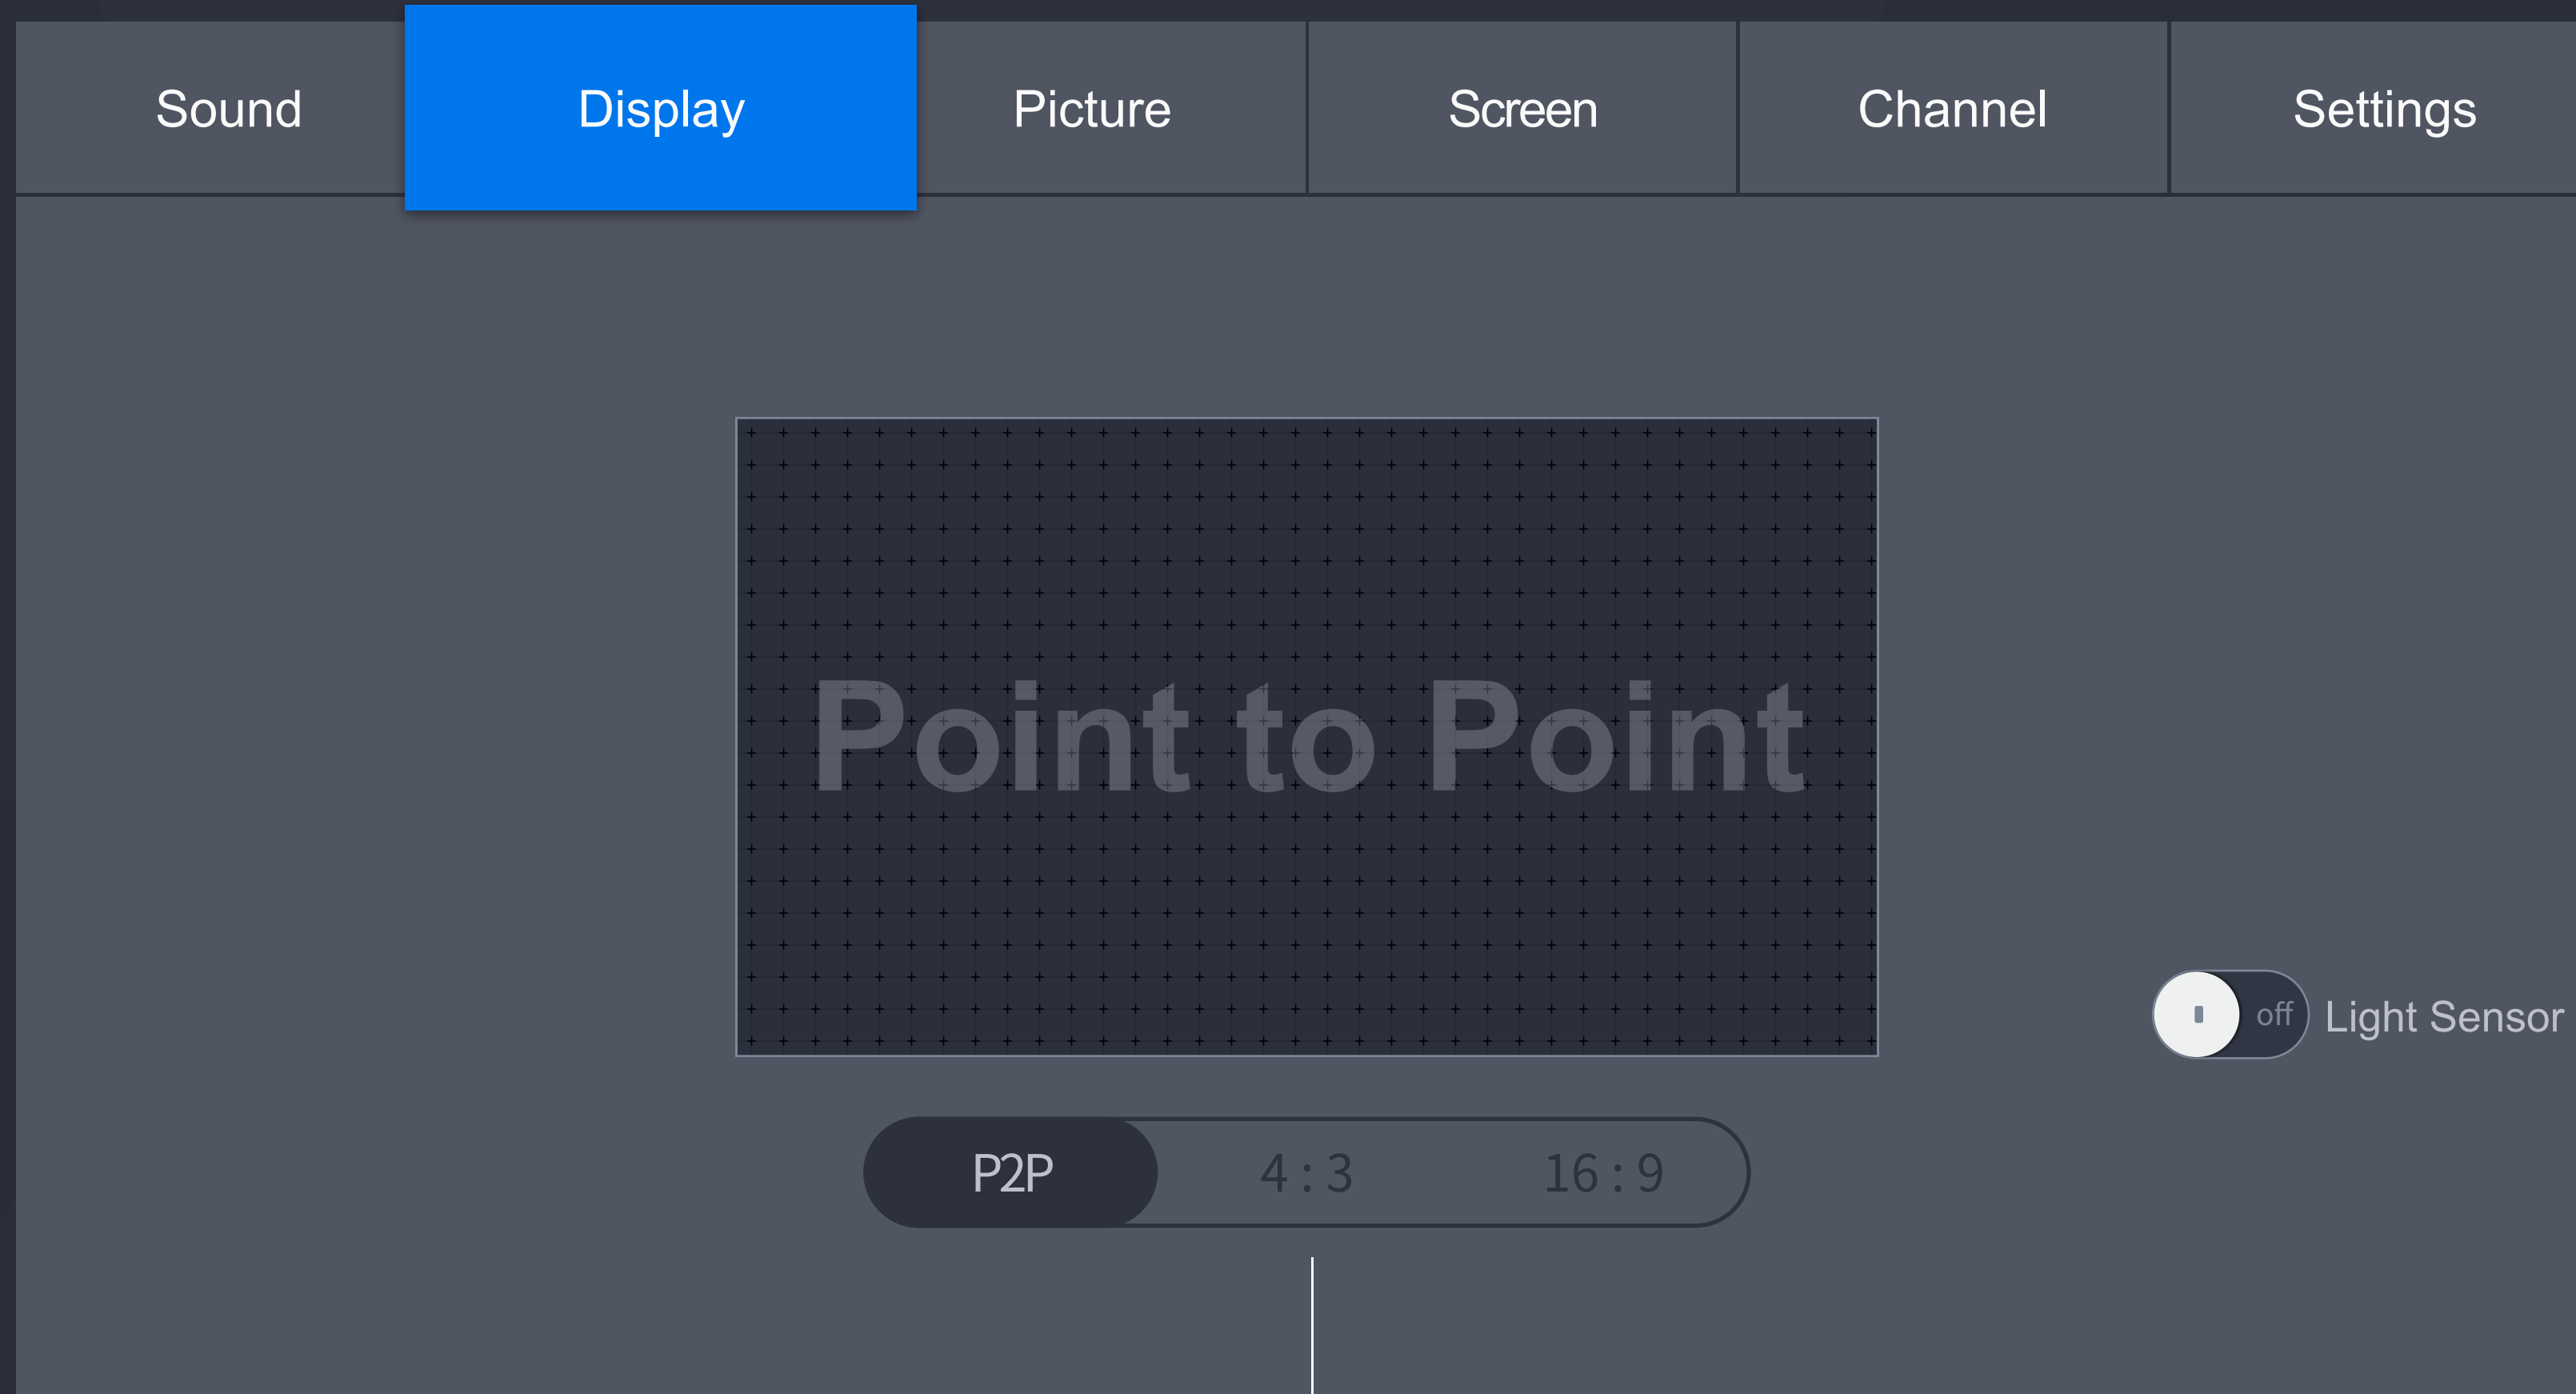


Turn on/turn off light sensor

Click the button to switch preset screen ratio

02-3 OSD MENU


Picture mode

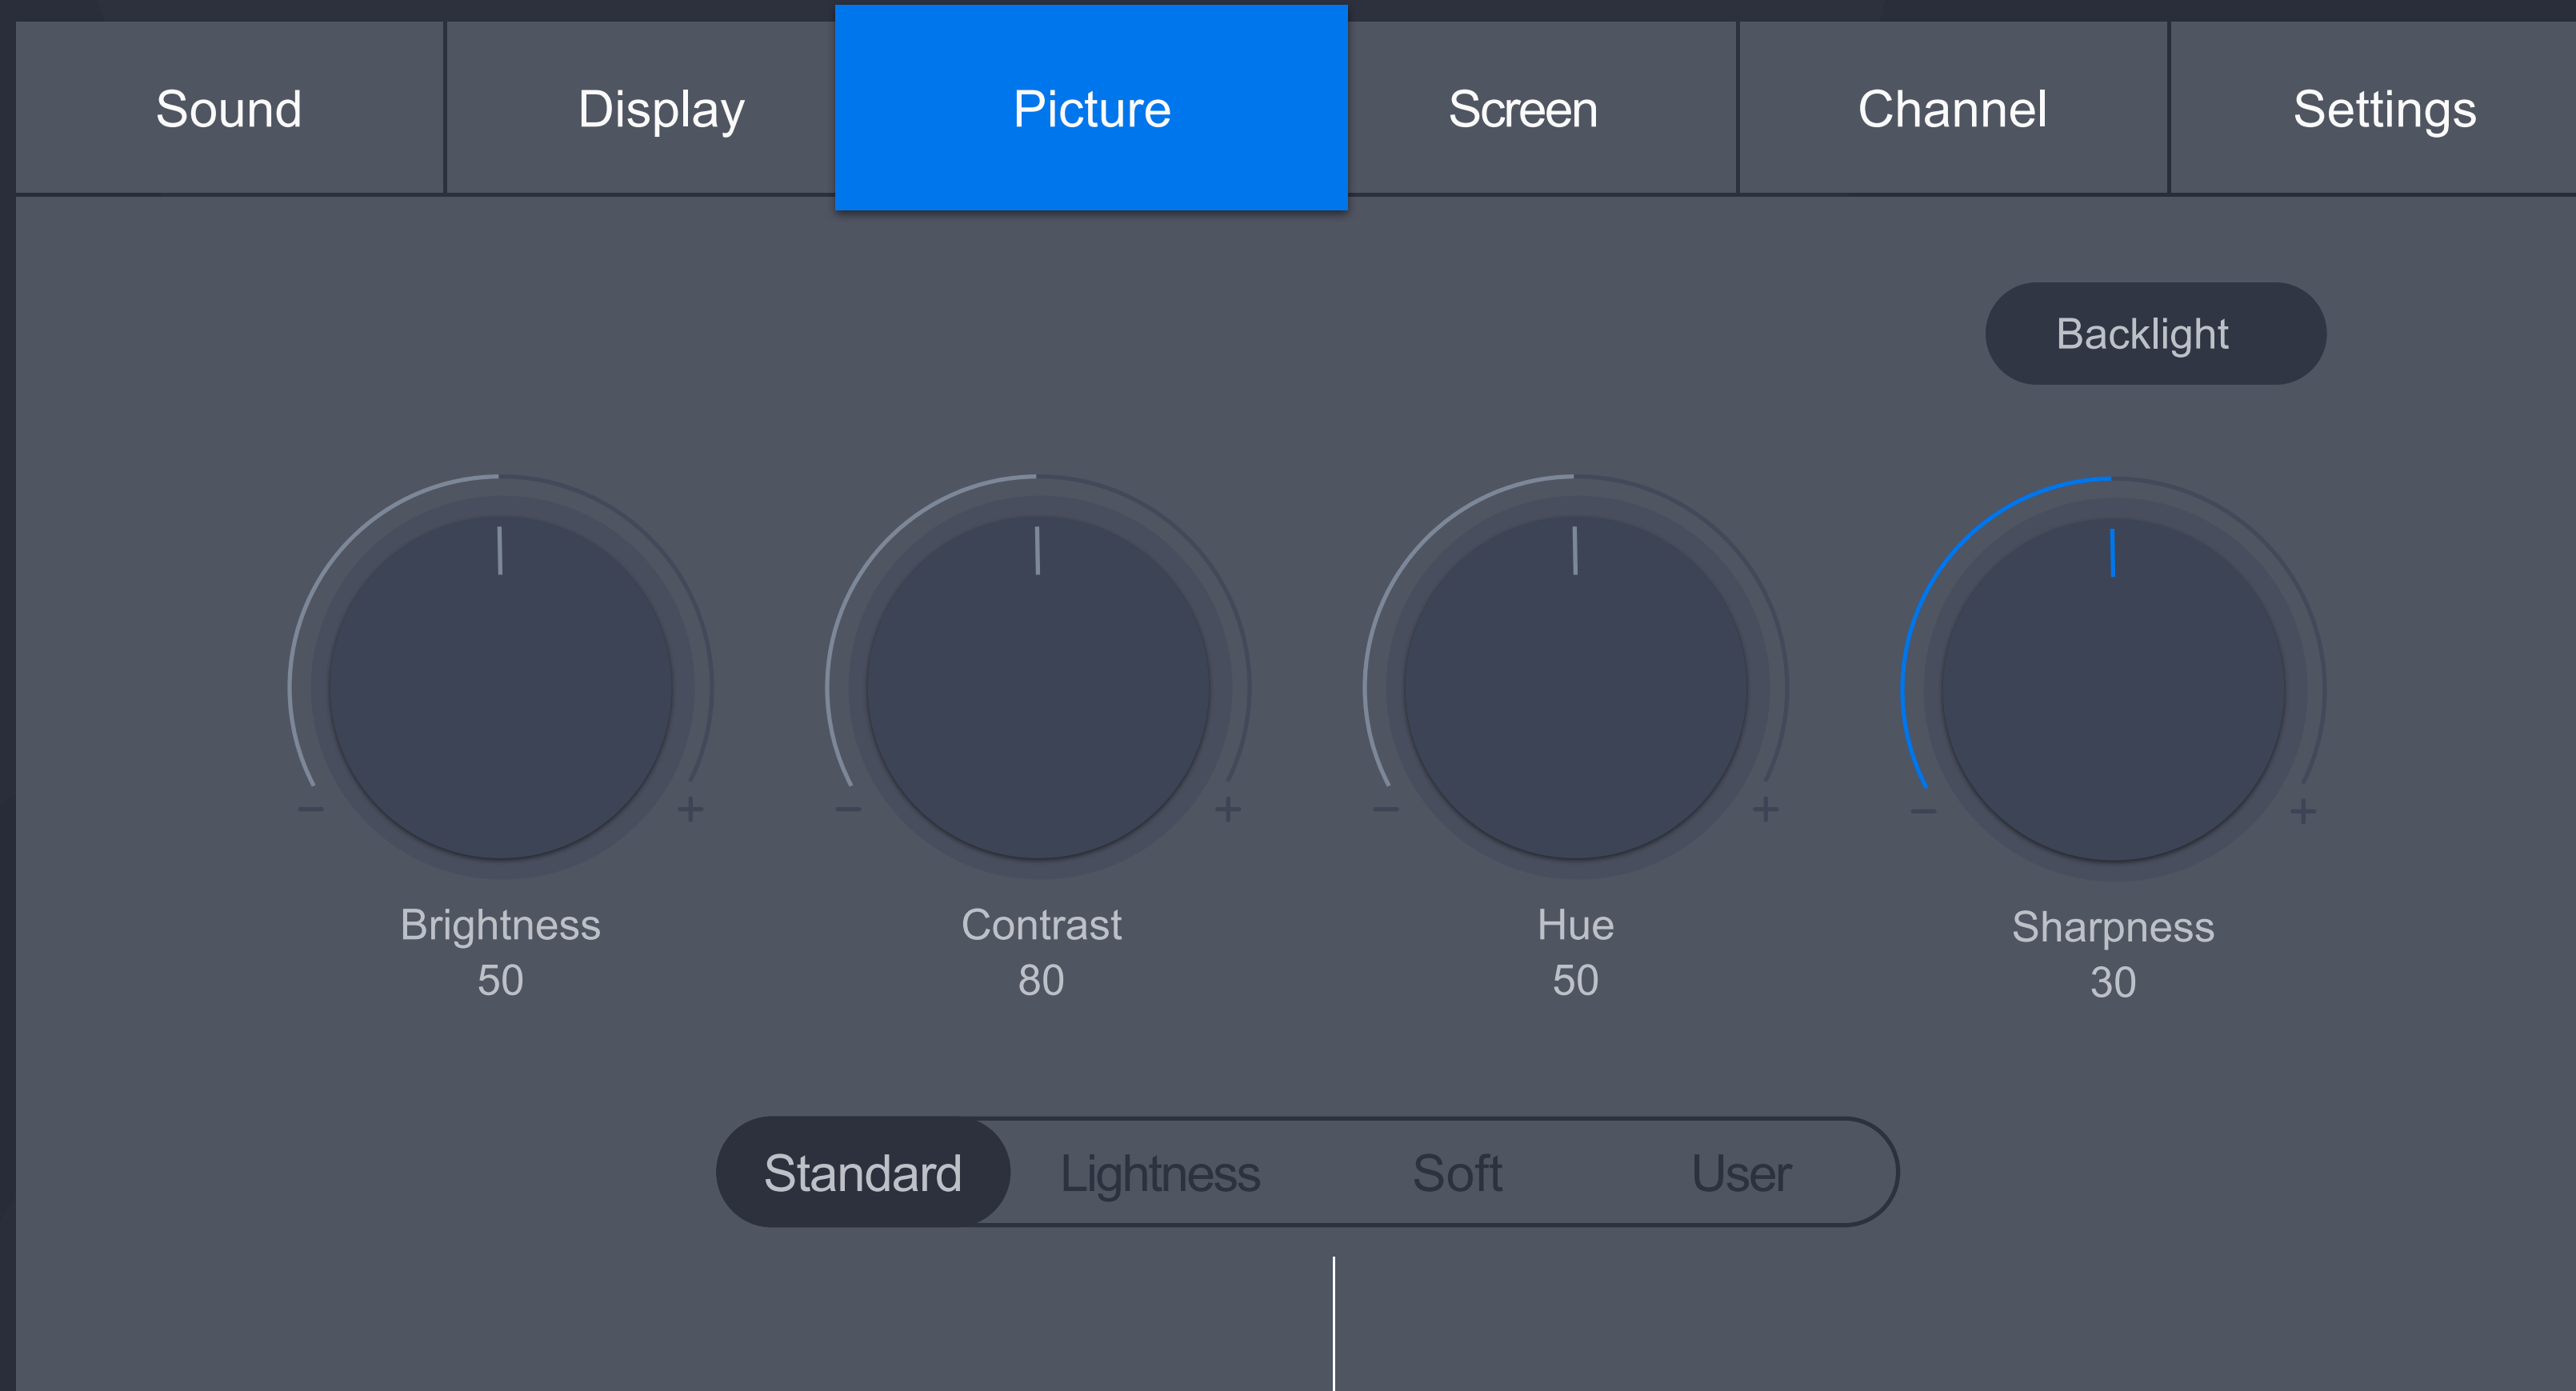

Click the button to switch the picture mode

02-4 OSD MENU

Screen adjustment

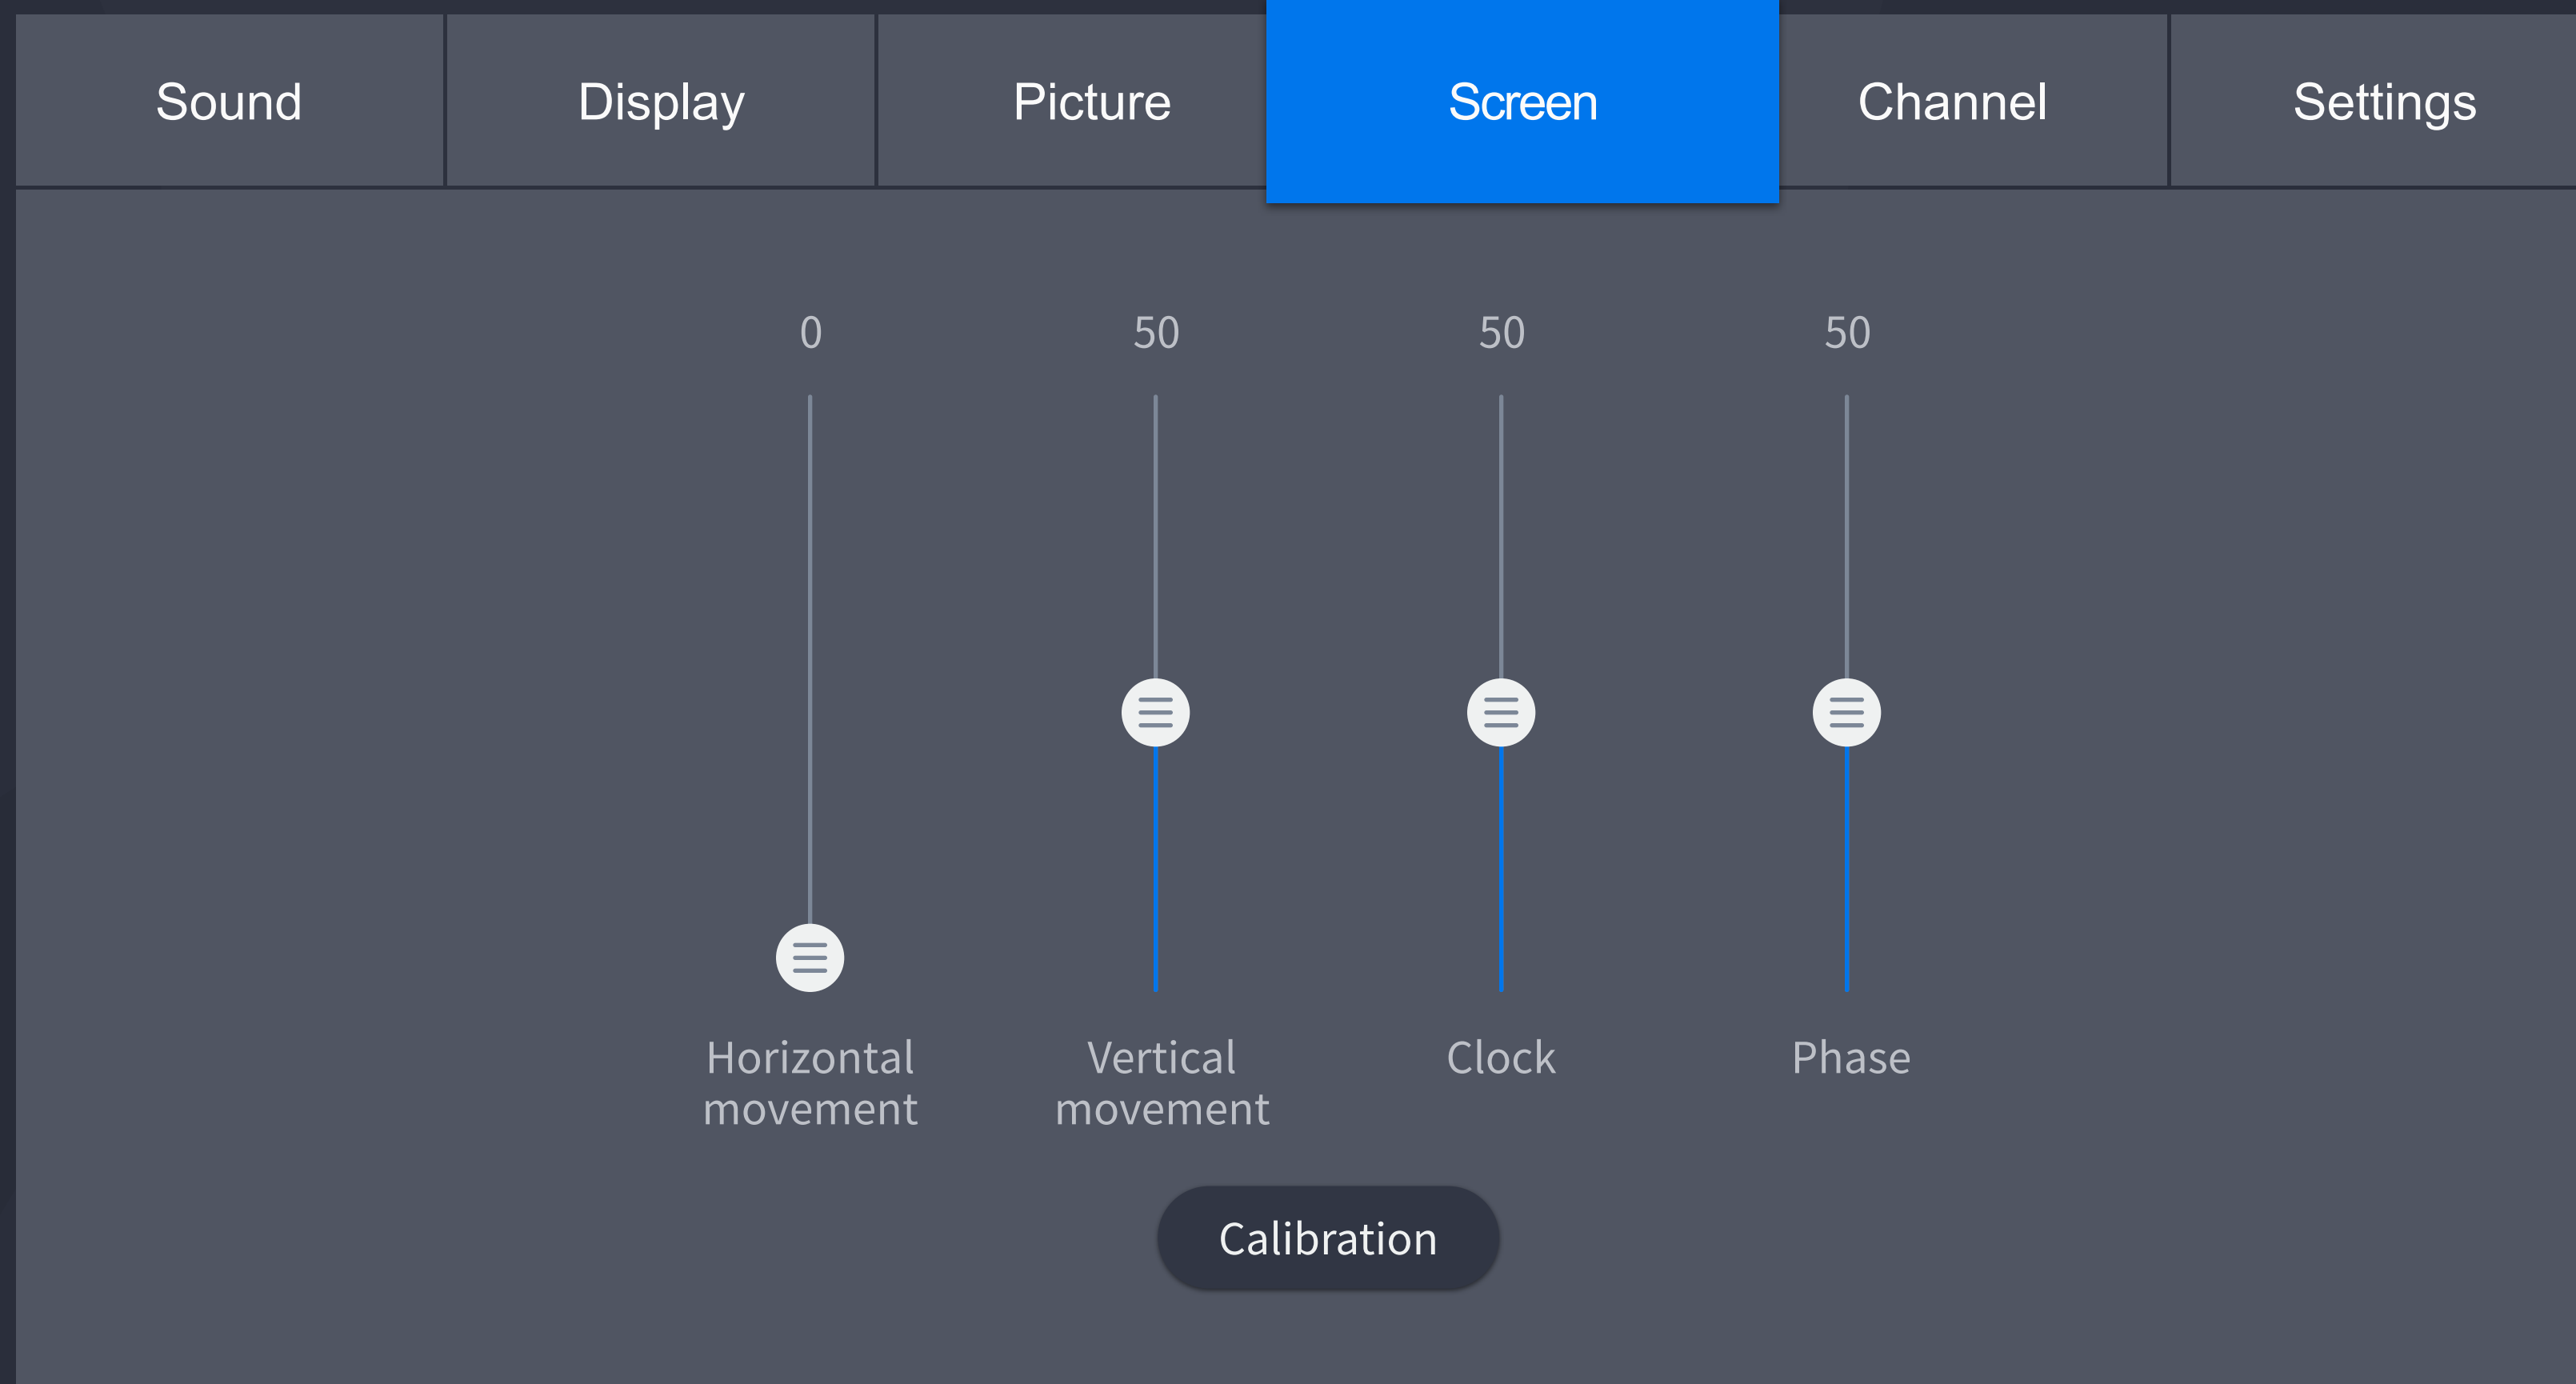

The OSD menu interface for 'Screen adjustment' features a top navigation bar with six tabs: 'Sound', 'Display', 'Picture', 'Screen', 'Channel', and 'Settings'. The 'Screen' tab is highlighted in blue. Below the navigation bar, four vertical sliders are displayed for adjustment: 'Horizontal movement' (set to 0), 'Vertical movement' (set to 50), 'Clock' (set to 50), and 'Phase' (set to 50). Each slider has a white circular knob with three horizontal lines, and a blue vertical line indicates the current value. A 'Calibration' button is located at the bottom center of the screen.


Adjustment	Value
Horizontal movement	0
Vertical movement	50
Clock	50
Phase	50

Calibration

This feature is only available when you plug in an input source

02-5 OSD MENU

Channel

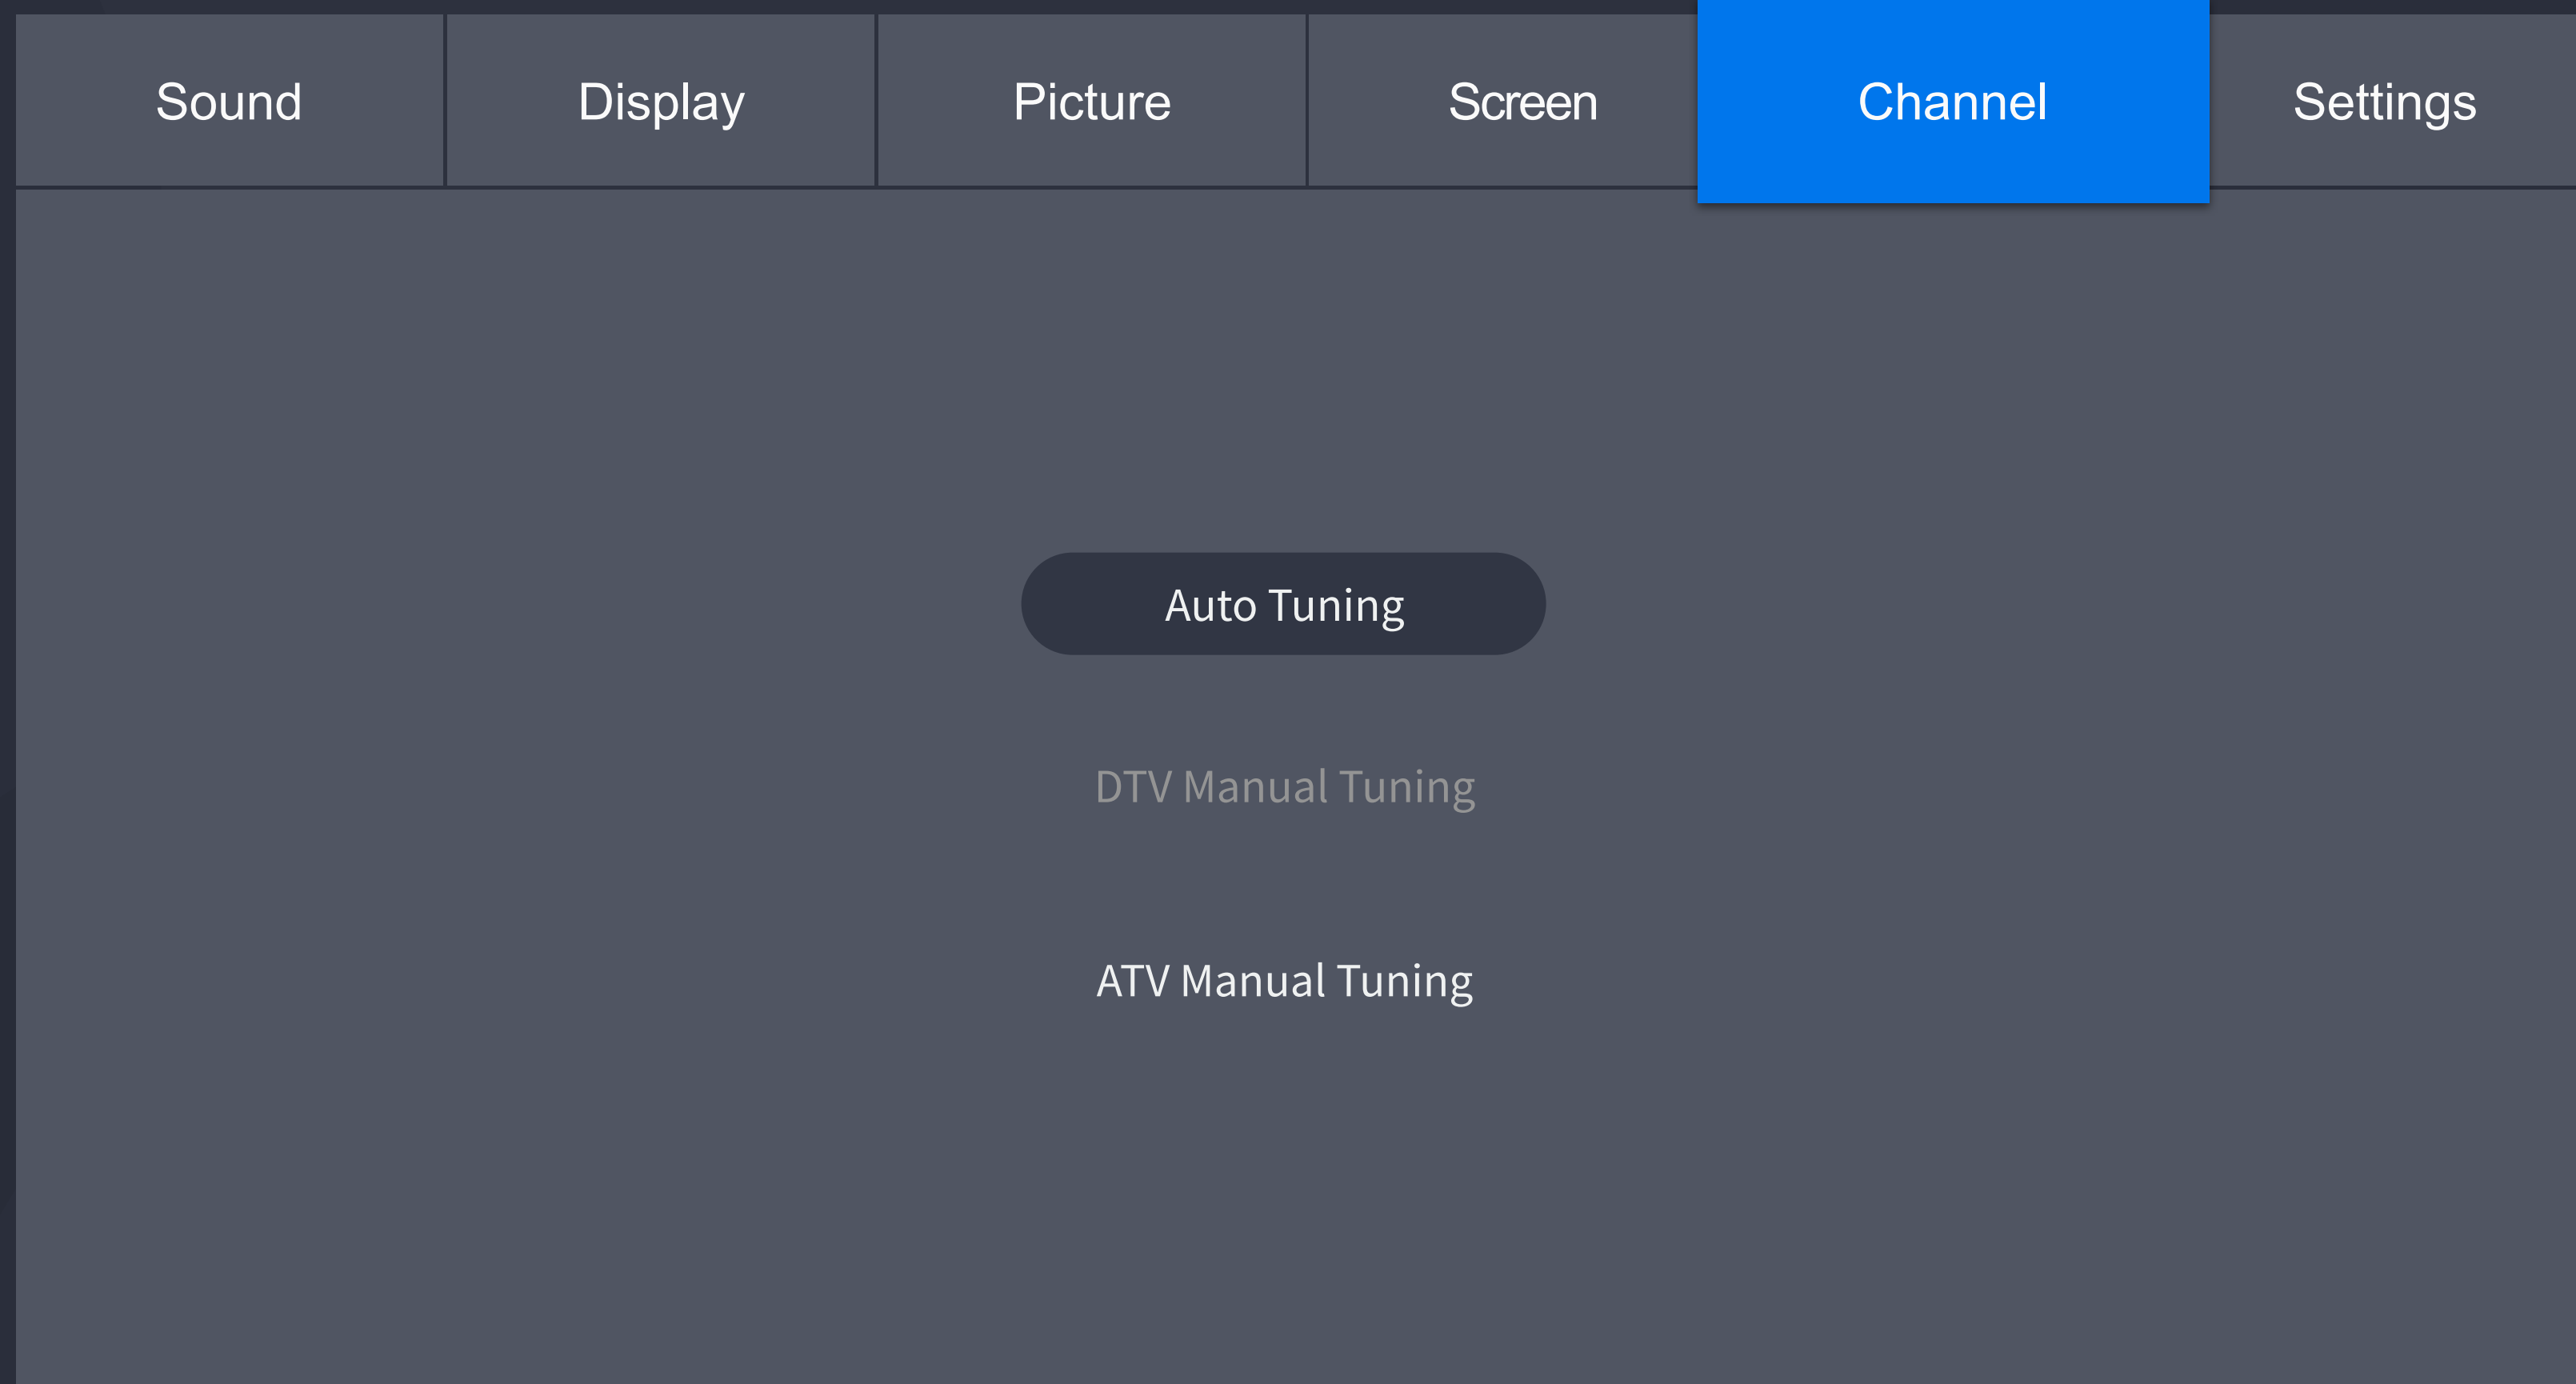

This feature is only available under the TV function.

NOTE: ATV and DTV are only available for mainland China market, except mainland China market, in other markets these functions are removed and disable.

02-6 OSD MENU

OSD settings

Sound

Display

Picture

Screen

Channel

Settings

No signal shutdown time

< Never >

Menu display time

< 5 seconds >

03 APP STORE

Provide common android applications

Office



Microsoft Word

Efficient office

Version 16.0.10730.20043

Install



Microsoft Excel

Efficient office

Version 16.0.10730.20043

Install



Microsoft PowerPoint

Efficient office

Version 16.0.10730.20043

Upgrade

04 ANNOTATION WHITEBOARD

Annotation software with simple and quick operation

More options Auxiliary function

Clear historic annotation

Change the page background

Minimize

Quick annotation



Menu



Home



Tool



Pen




Muti-input



Select



Shape

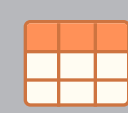

Table



Eraser



Insert




Undo



Redo



Setting

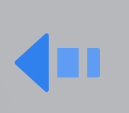

Previous

1/9

Page



Next


04-1 ANNOTATION WHITEBOARD

menu & toolbox

Focus at a specific position on the screen

Measure the length or draw a straight line

Shade current page

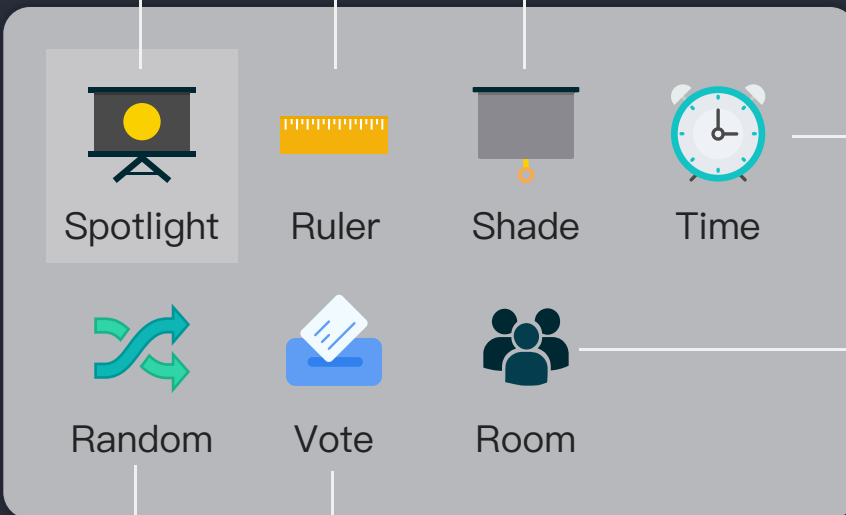


Timer/Coutdown

Remote room application

Apply to voting in meetings or classrooms

Radom Arabic Arabic numerals

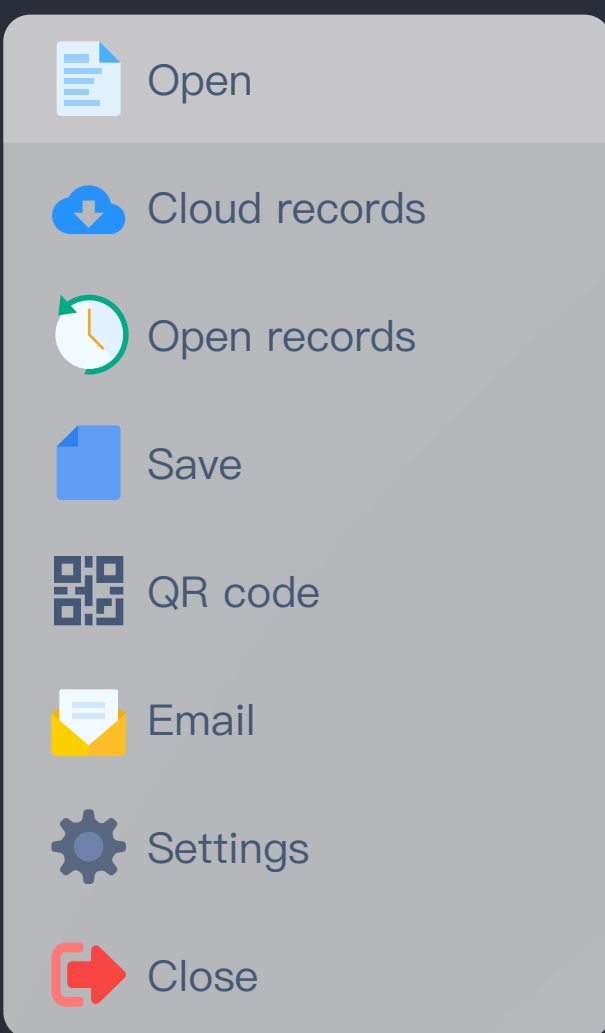

Open PDF File

Cloud meeting records

Open records here




Save the annotatation content as a picture

Scan QR code for sharing to mobile devices

Share via email


Software settings

Exit annotation software

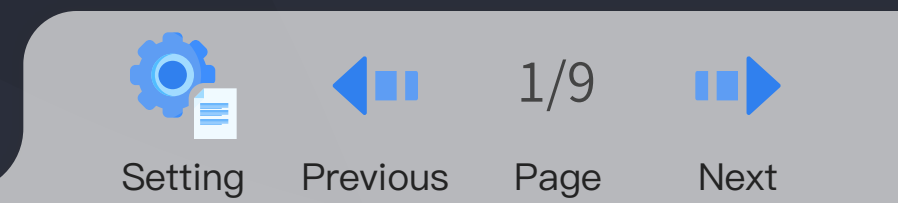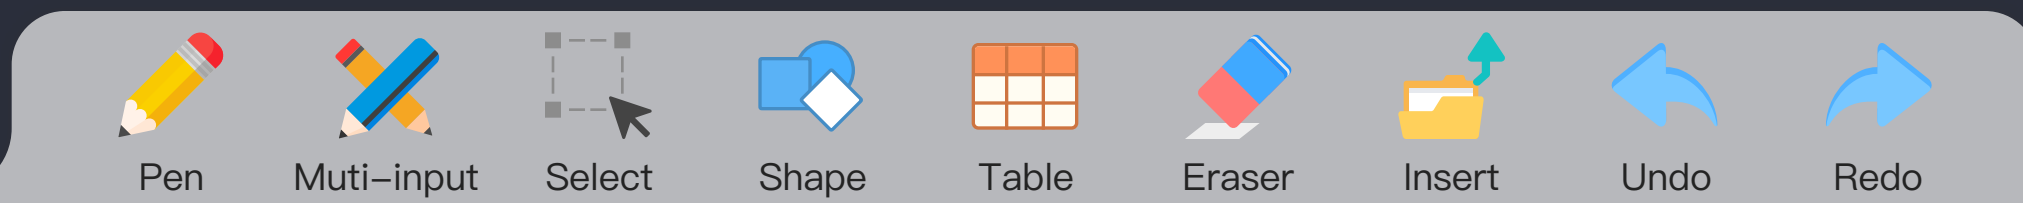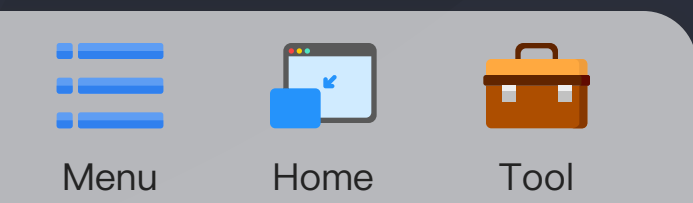


04-2 ANNOTATION WHITEBOARD

pen & eraser

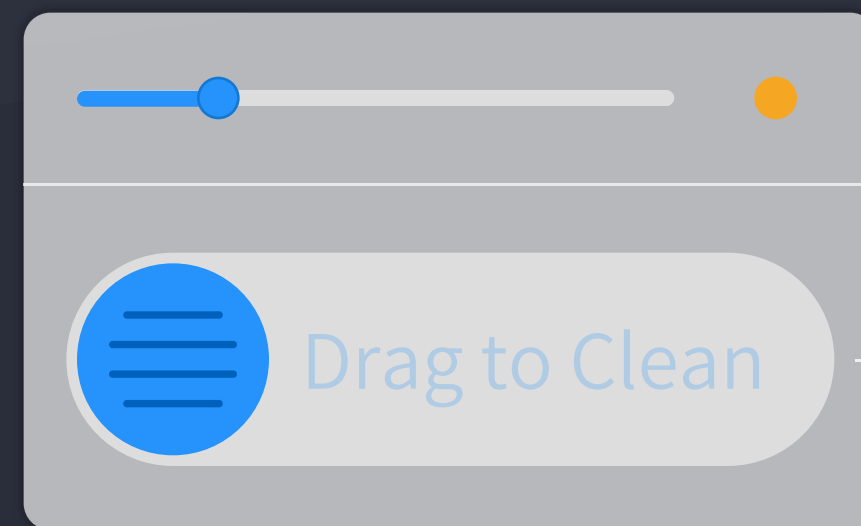

Slide to clear annotation on the page

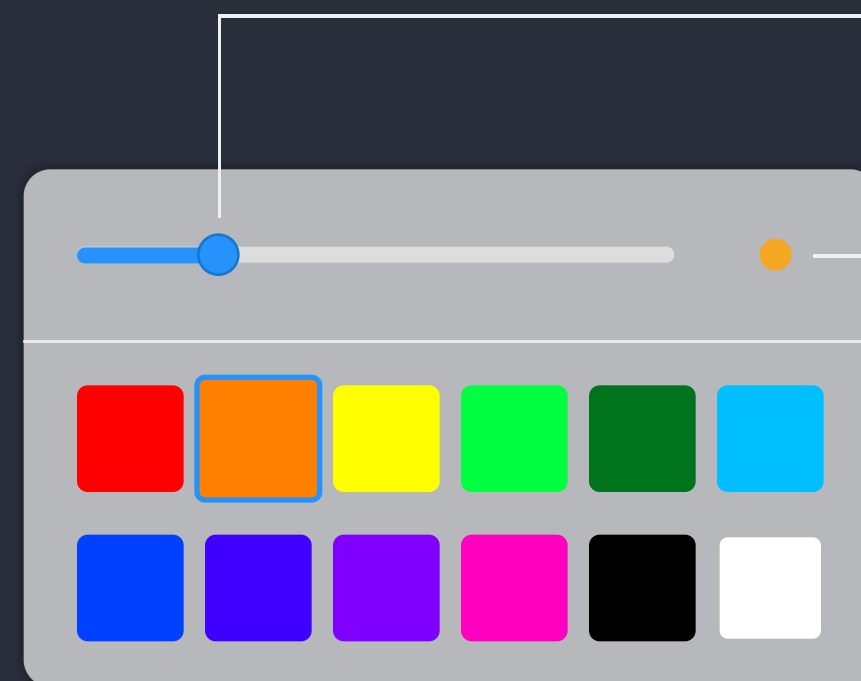

Drag to resize the pen thickness

Displays the size of the pen



Menu



Home



Tool



Pen



Multi-input



Select



Shape



Table



Eraser



Insert



Undo



Redo



Setting



Previous

1/9


Page



Next

04-3 ANNOTATION WHITEBOARD

page settings

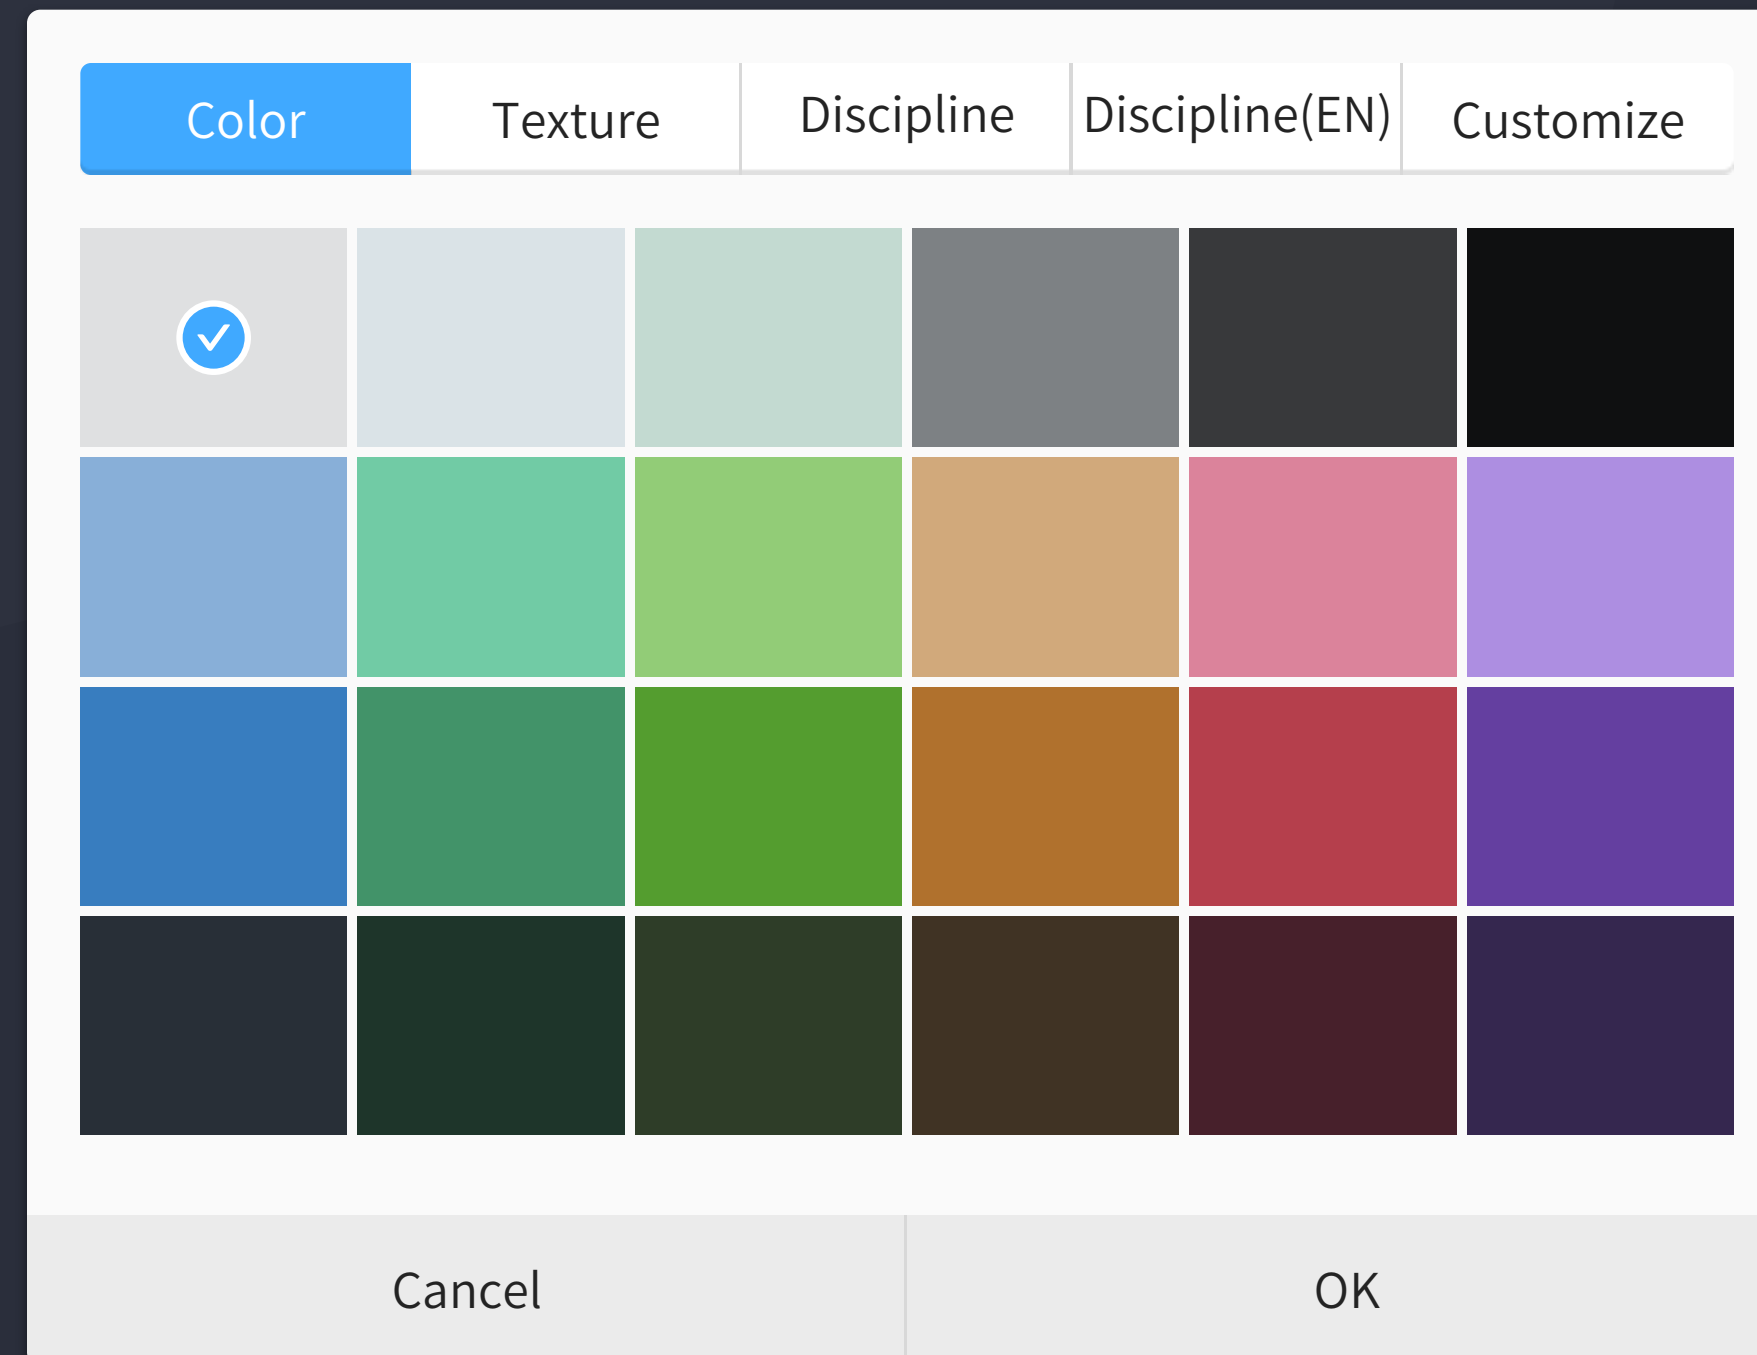

New page

Delete the current page



Menu



Home



Tool



Pen




Muti-input



Select



Shape

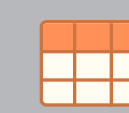

Table



Eraser



Insert



Undo



Redo



Setting



Previous

1/9

Page



Next

01

02

03

04

05

06

07

08

09



05 HOME

Business interface, simple and clear



The device can complete signal extraction, digital-to-analog conversion, digital signal processing, etc. through the system signal source

Annotate important contents or record information quickly

Files are stored by category, easy to find and manage

All default and download applications



DrawView X



Screencast



ES File




Application

06 SOURCE


Click here or select the corresponding source button to switch to the corresponding channel


After inputting digital TV source, it can automatically or manually search channels in the menu

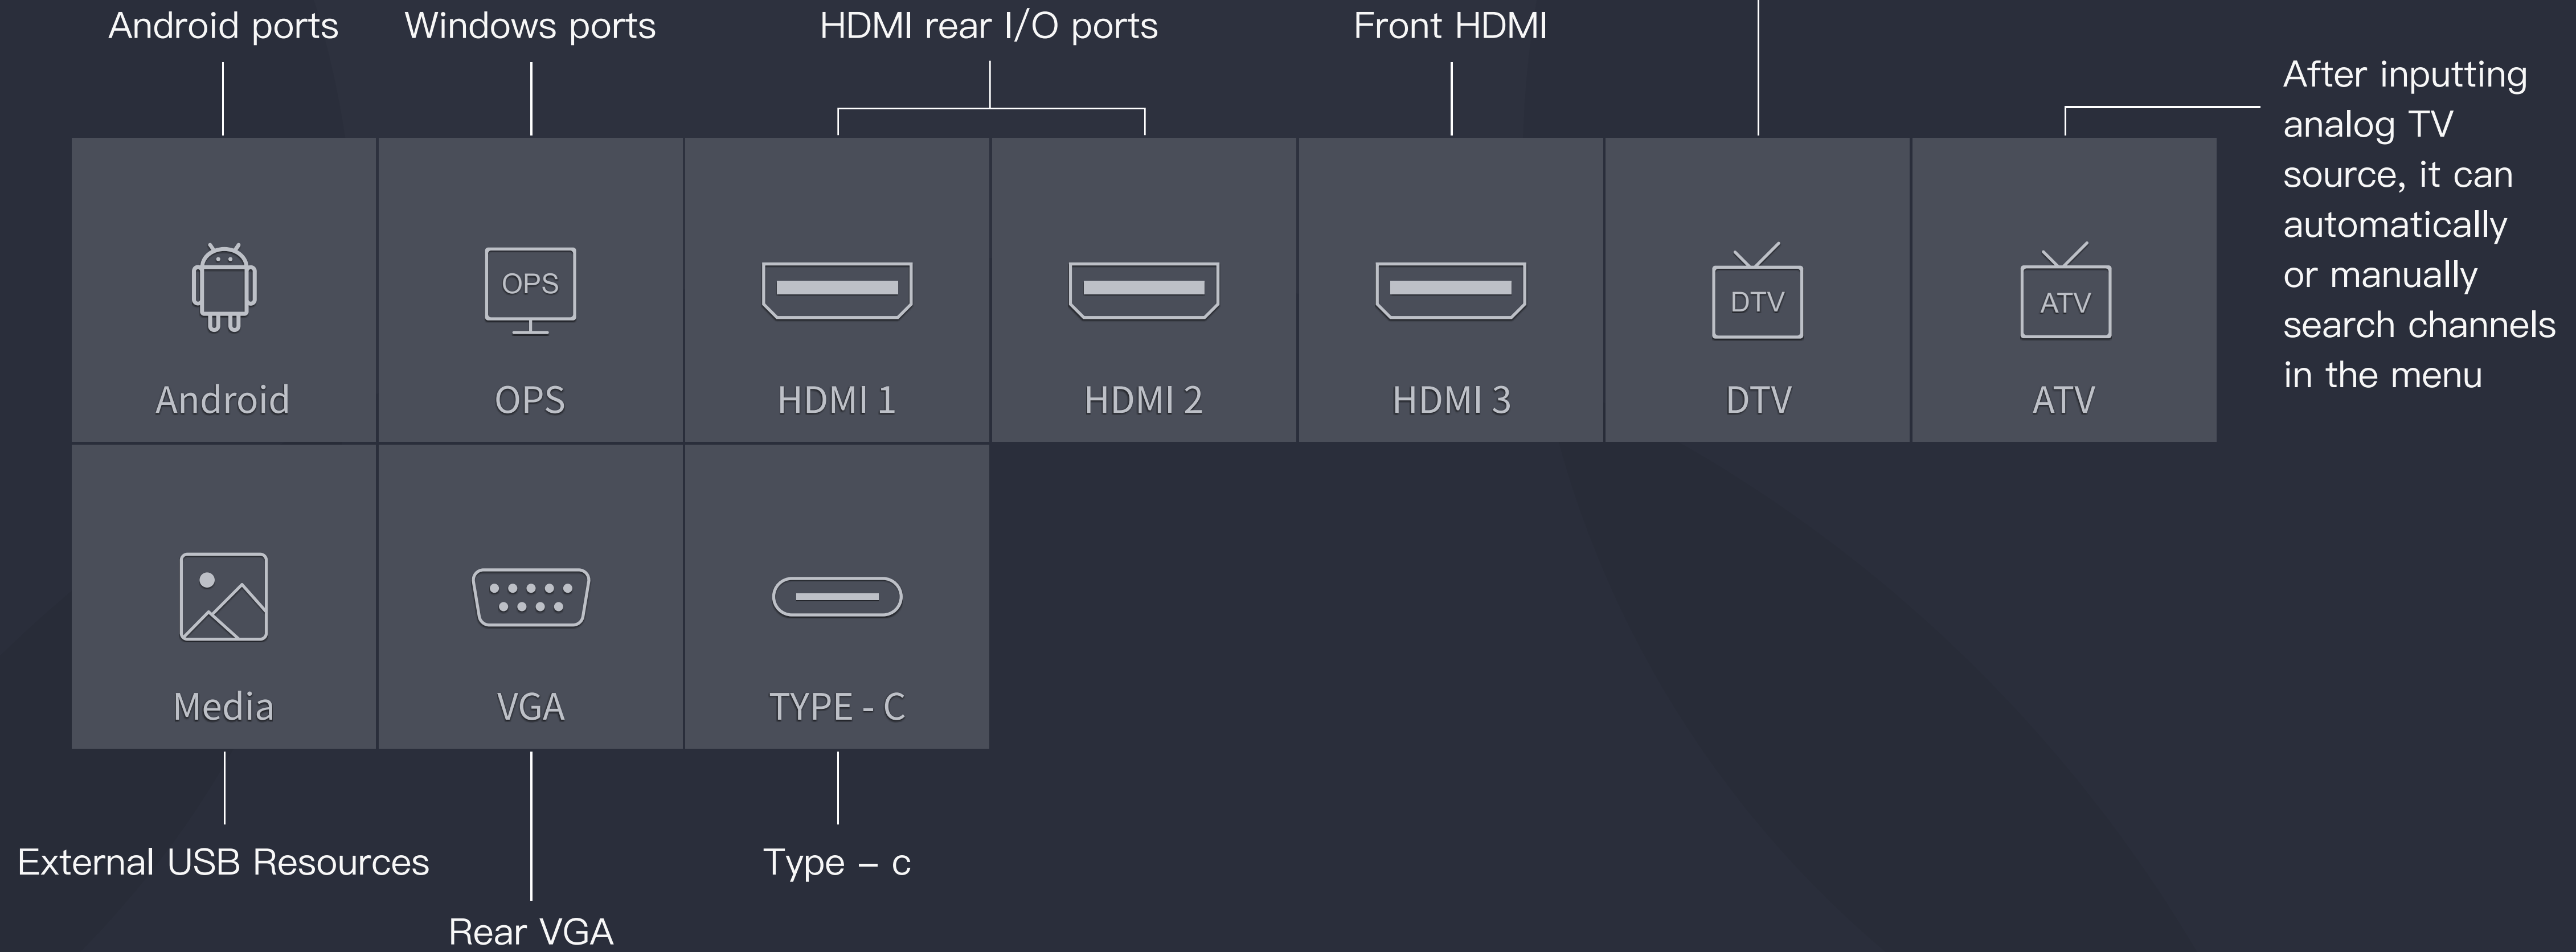


07 SETTING


System setting


 **Network & internet**
Wi-Fi, data usage, hotspot

 **Connected devices**
Bluetooth

 **Apps & notifications**
Permissions, default apps


Check application information

 **Display**
Wallpaper, sleep, font size

 **Storage**
22% used - 12.45 GB free

Check device/USB storage

 **Google**
Services & preferences

 **System**
Languages, time, backup, updates

Check/modify touch screen monitor setting

Channel Settings

Boot channel

Android

Sidebar source

OPS

Custom Channel

Automatic switch signal source

07-1 SETTING

Touch screen setting

Turn on/off source automatic switching function。
When turn on, it will automatically switch to the source screen
when an input signal is detected.



Lock Settings

System password

Boot-up will enter the lock screen page

Screen Lock Password Setting



set system password

Boot-up items

Boot start OPS




Accessibility

Assistive touch



08 PORTS


Front Panel

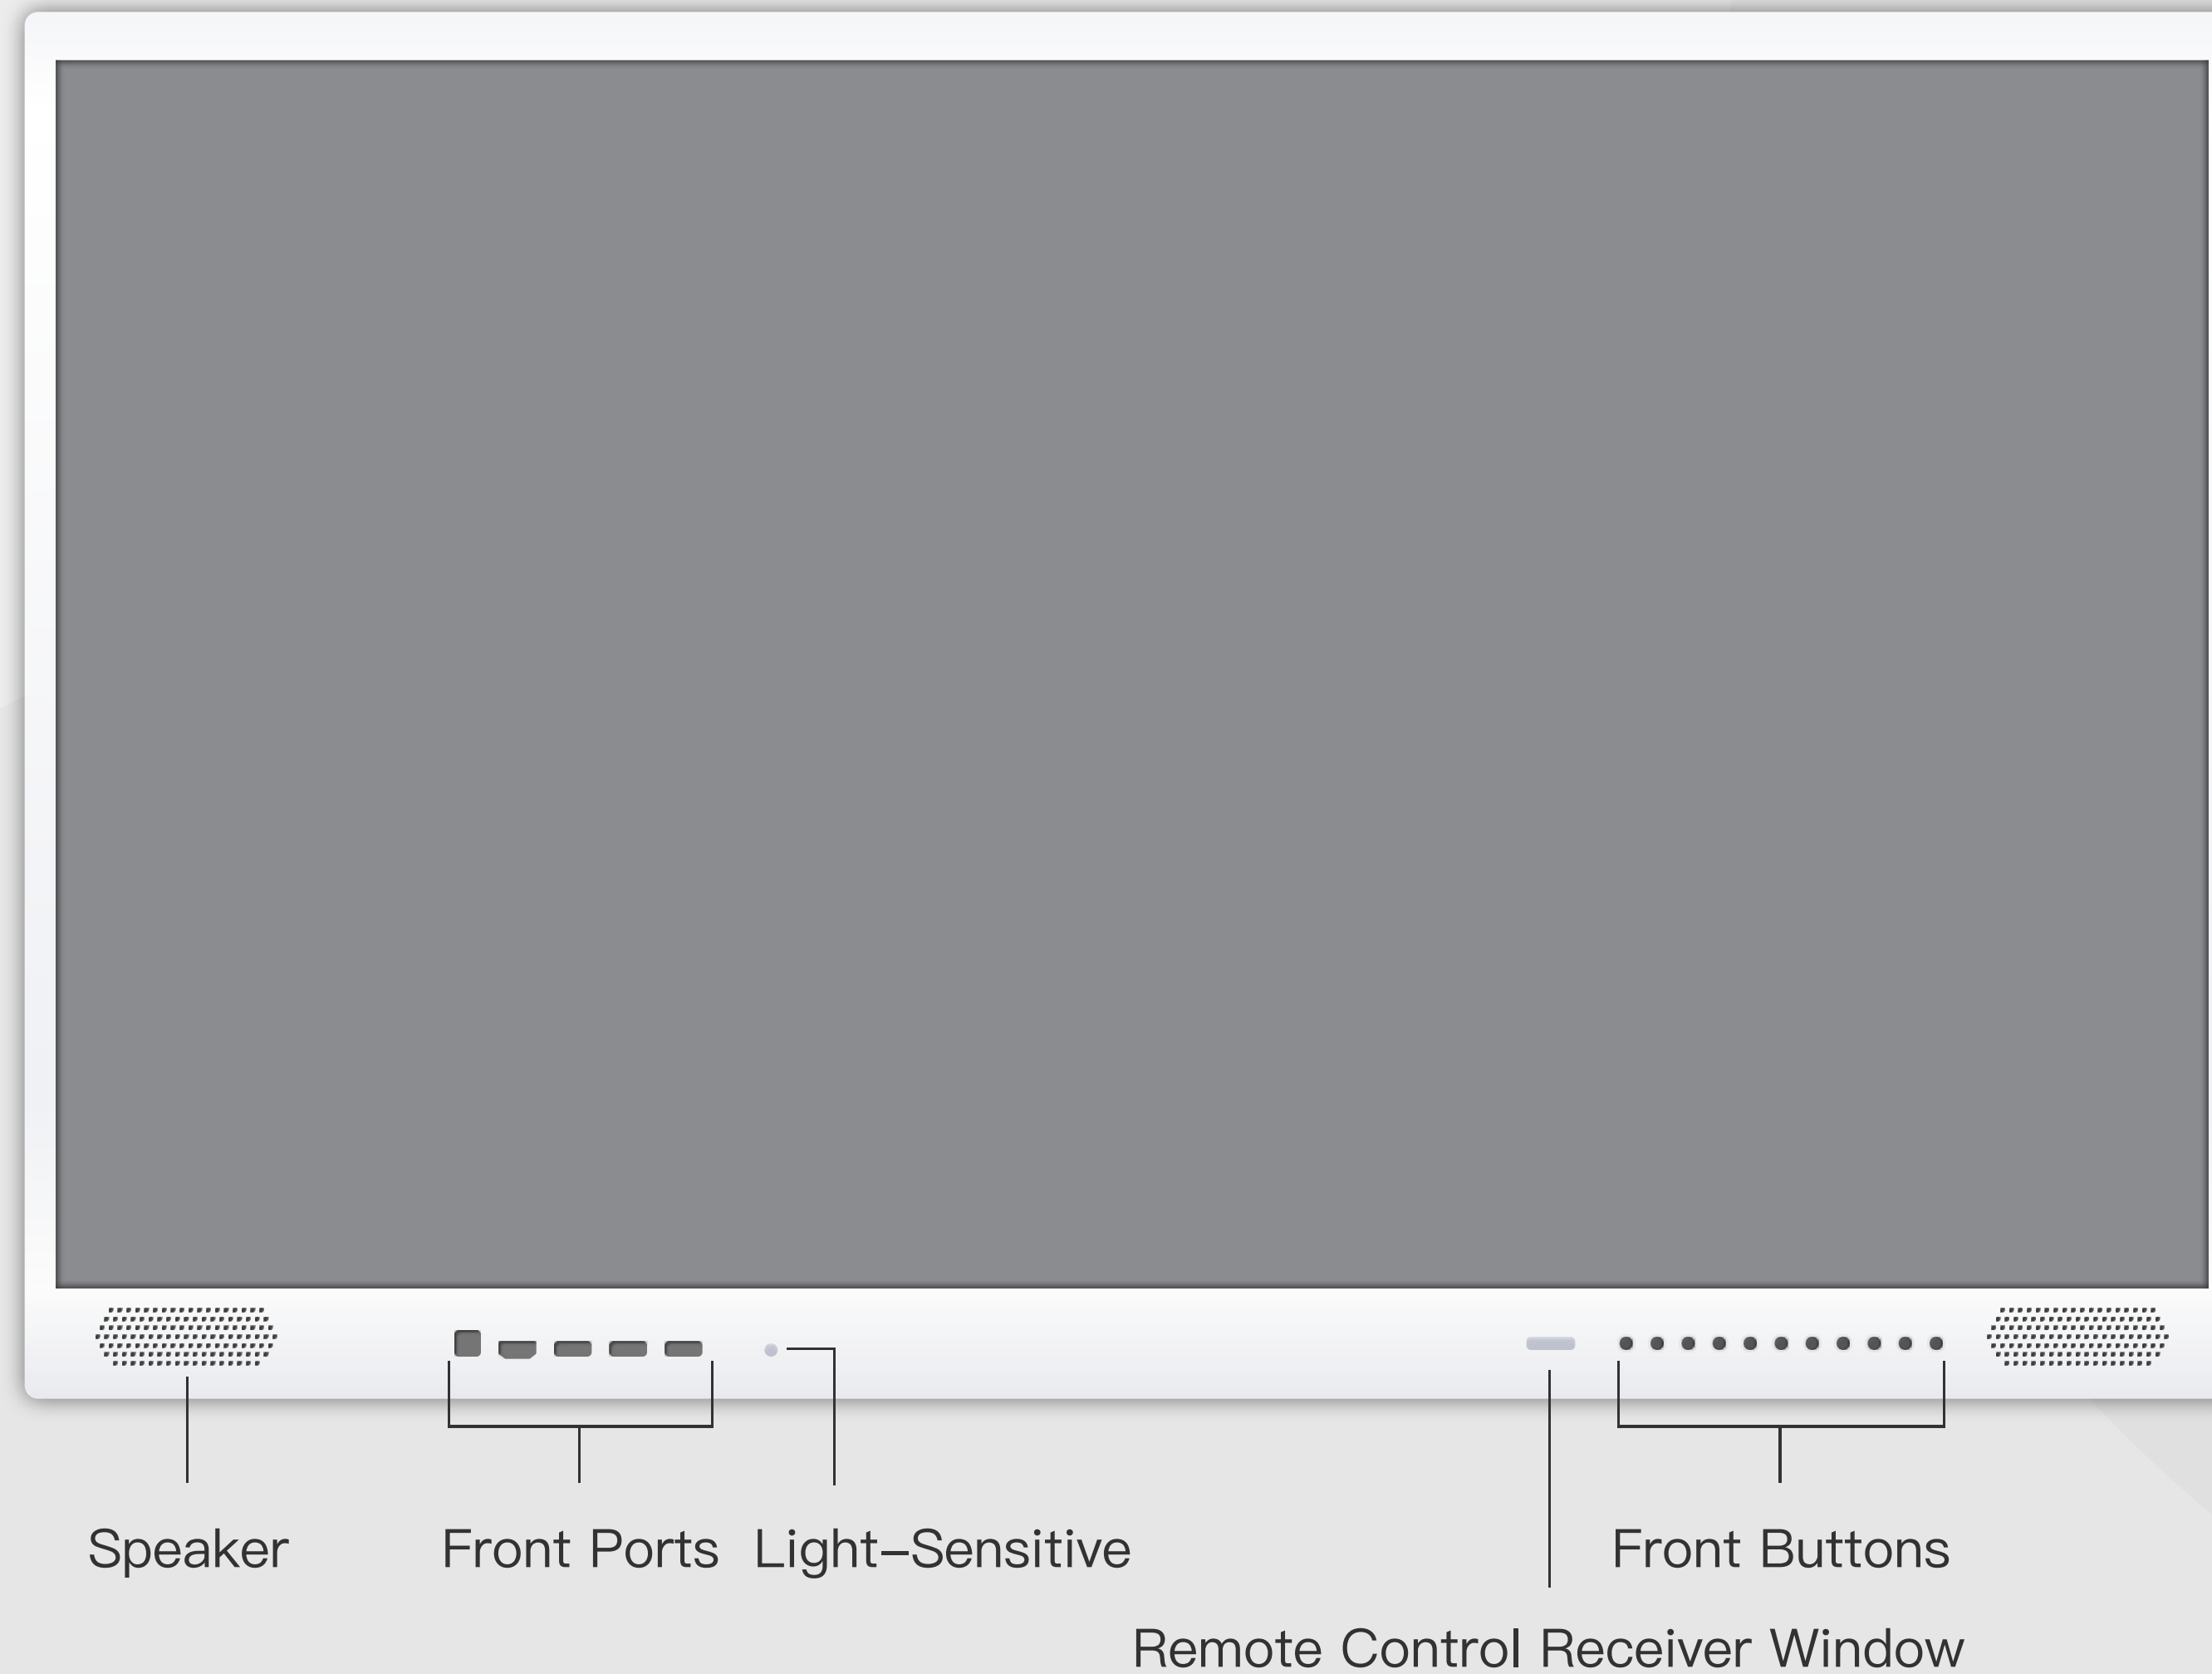

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

08-1 PORTS

Front Ports

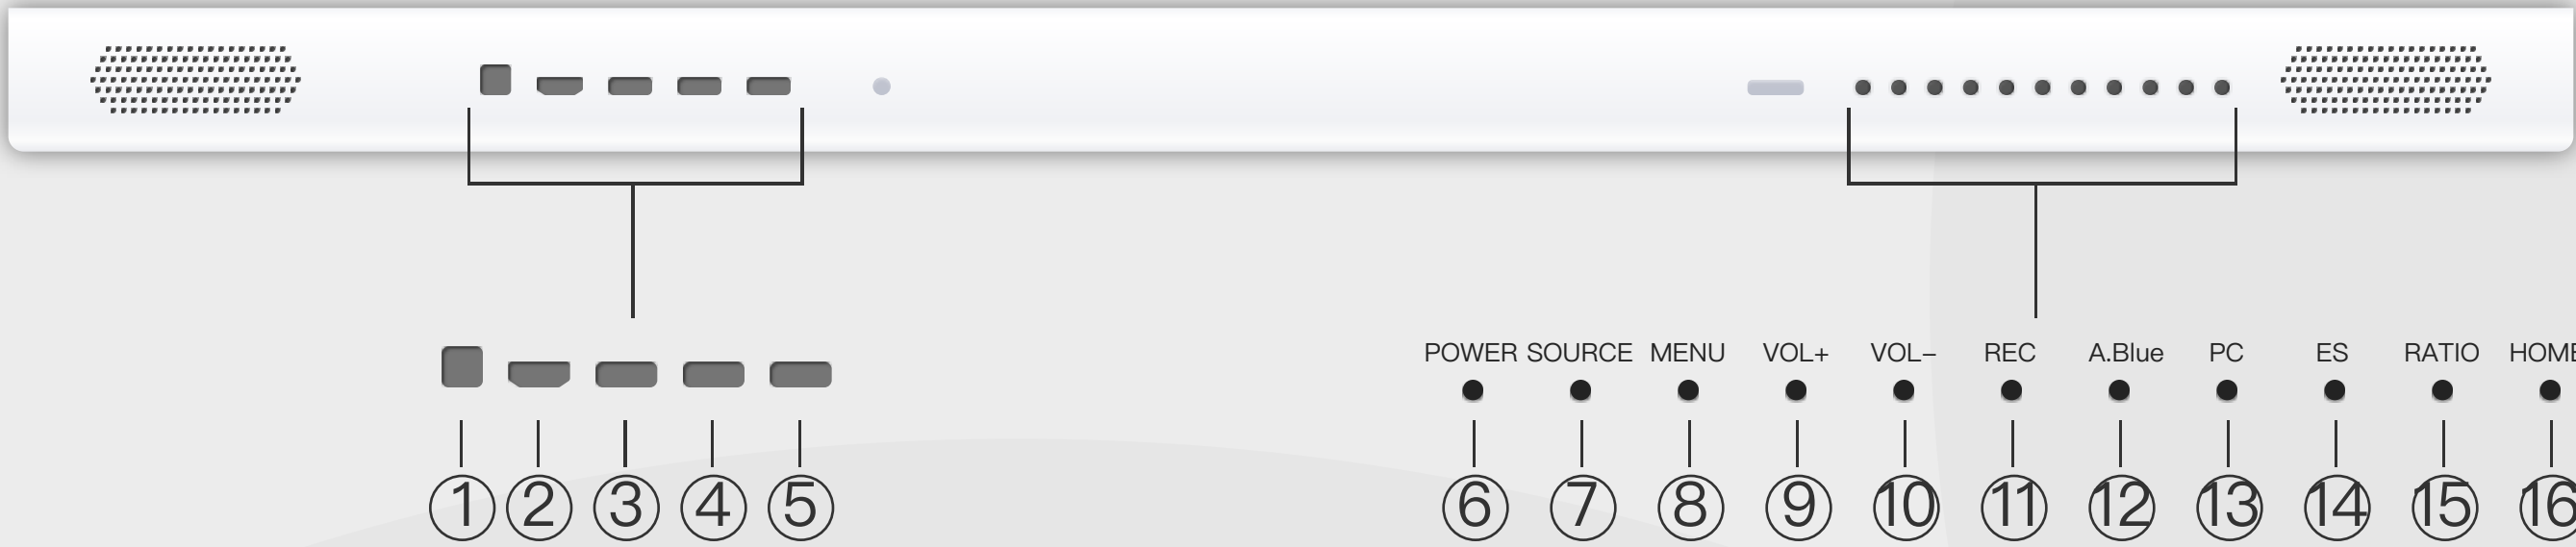


NO.	NAME	DESCRIPTION
1	TOUCH USB	Touch USB, only work with HDMI3
2	HDMI 3	HDMI in
3	USB	USB
4	USB	USB
5	USB	USB

NO.	NAME	DESCRIPTION
6	POWER	Power on/off
7	SOURCE	Source
8	MENU	Menu
9	VOL+	VOL+
10	VOL-	VOL-
11	REC	Recorder
12	A.Blue	Anti-Bluelight
13	PC	PC (Built-in OPS power on/off button, if without OPS, this button can not work)
14	ES	Enter/exit energy saving mode
15	RATIO	Enter
16	HOME	Home

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

08-2 PORTS


Back Ports

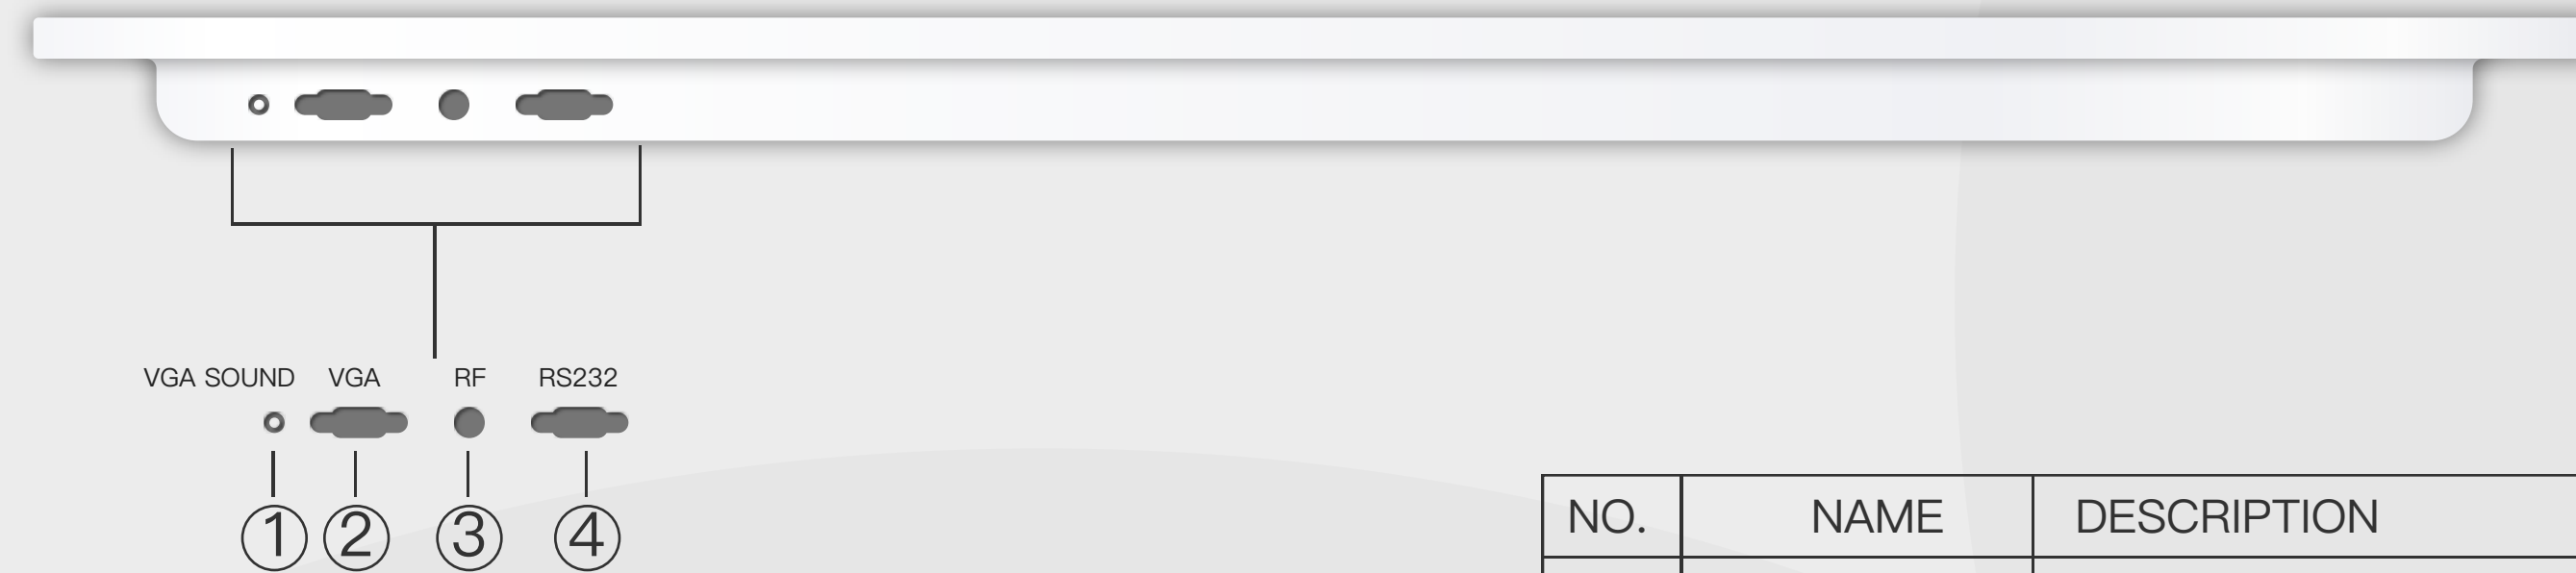

NO.	NAME	DESCRIPTION
1	VGA SOUND	VGA audio in
2	VGA	VGA in
3	RF	RF
4	RS232	RS232

08-3 PORTS


Rear Ports

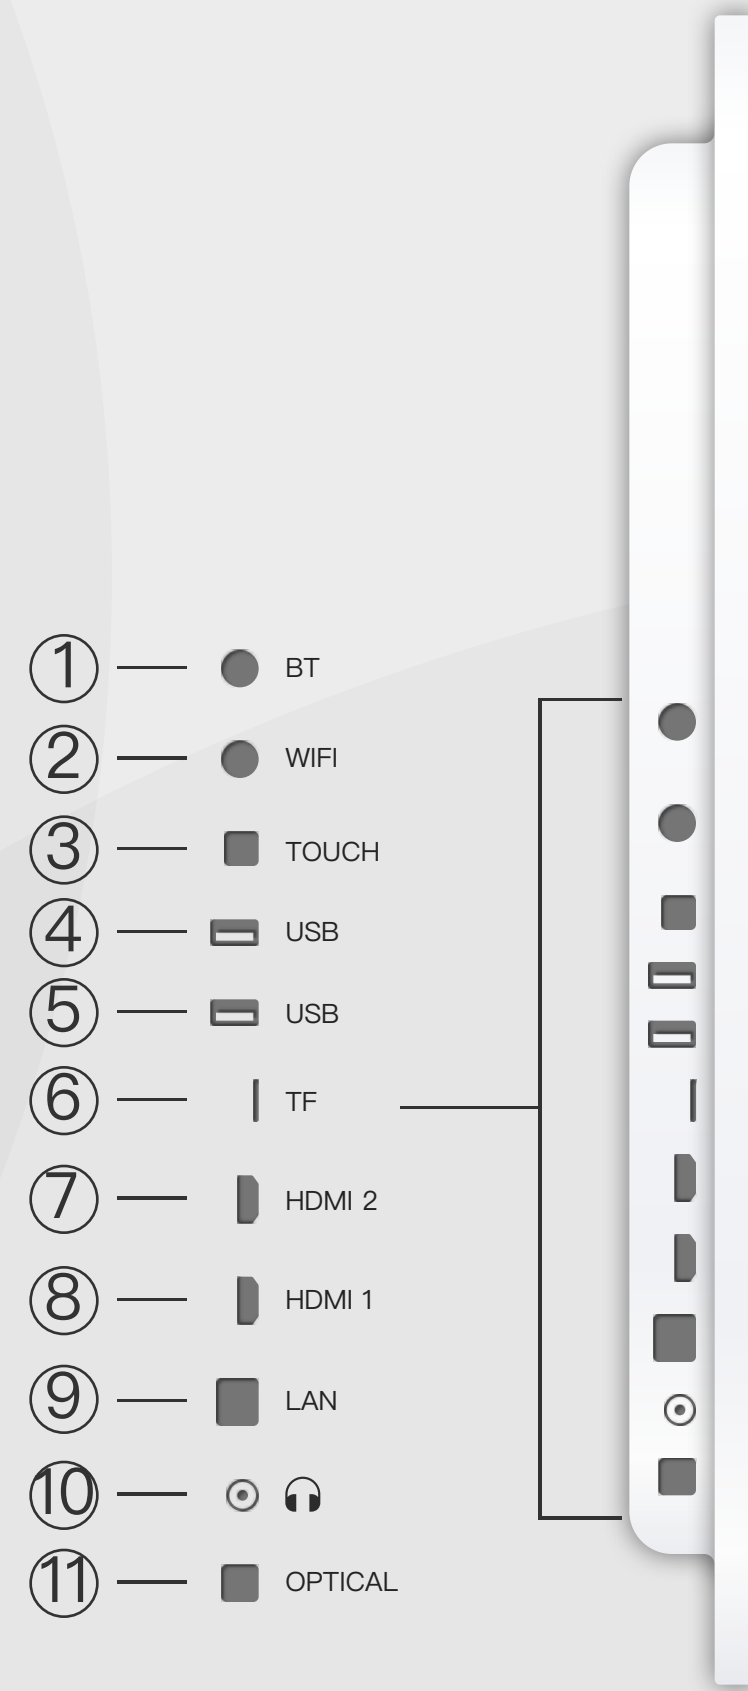

NO.	NAME	DESCRIPTION
1	BT	Bluetooth antenna
2	WIFI	WIFI antenna
3	TOUCH	Touch USB
4	USB	Media USB
5	USB	Media USB
6	TF	TF card
7	HDMI 2	HDMI 2 in
8	HDMI 1	HDMI 1 in
9	LAN	RJ45
10	🎧	Earphone out
11	OPTICAL	SPDIF

09 REMOTE CONTROLLER

Remote controller buttons

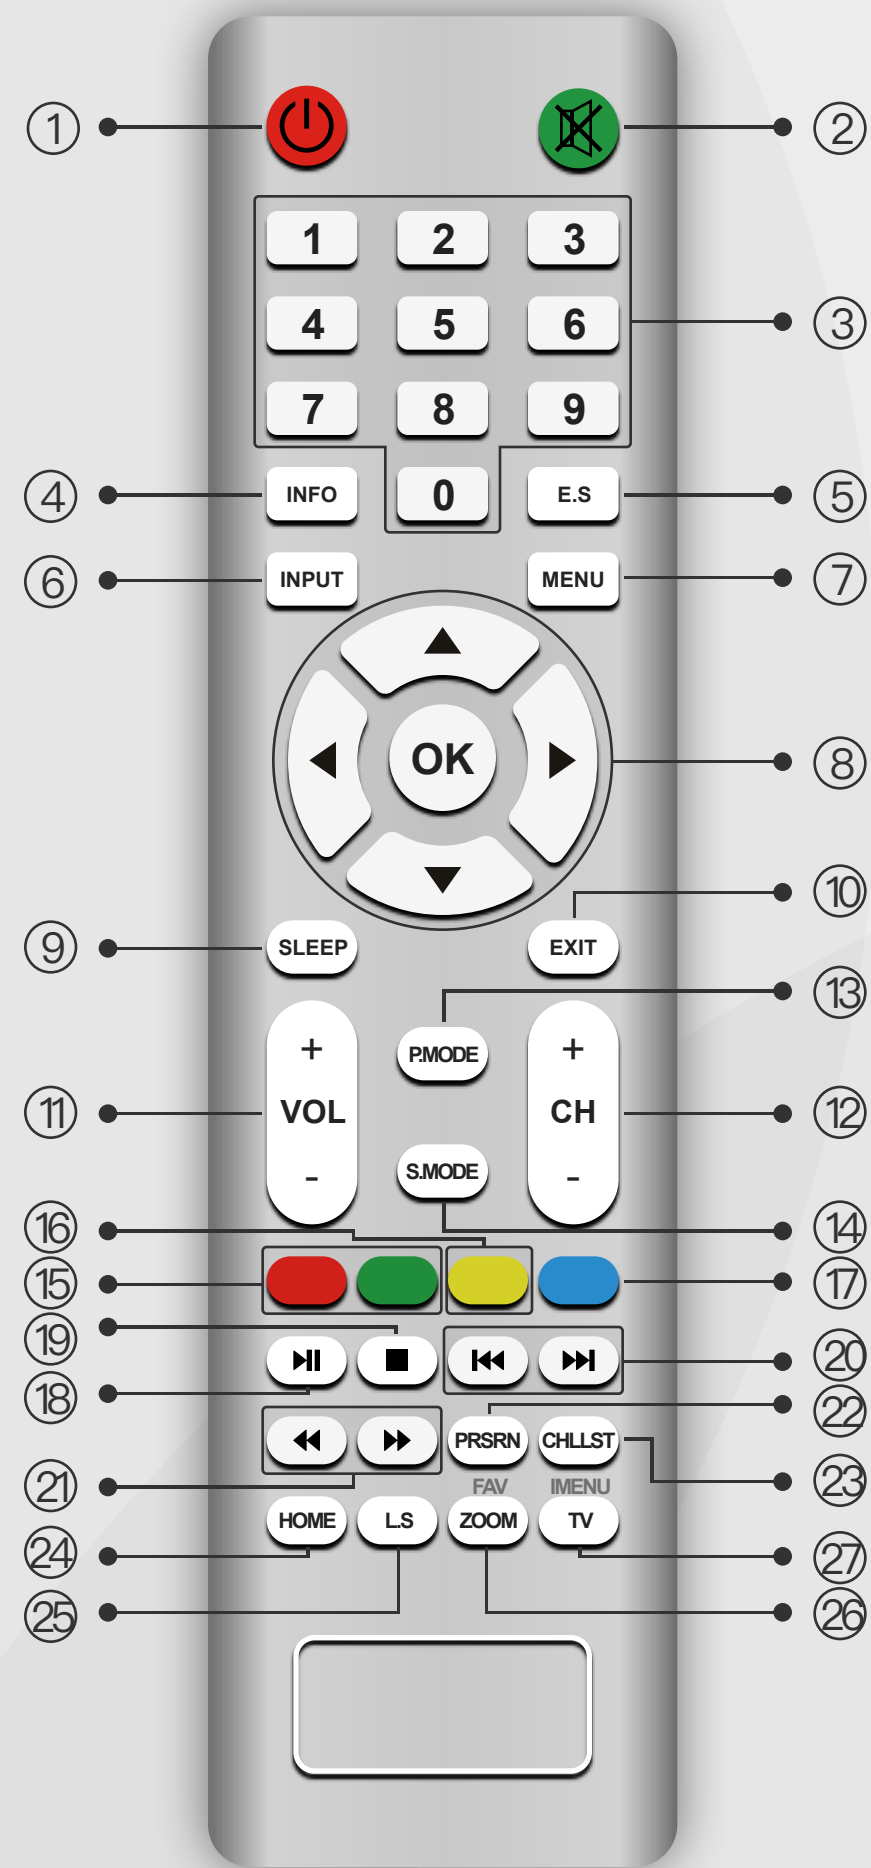

NO.	NAME	DESCRIPTION
1	POWER	Turn on or turn off the machine
2	MUTE	mute or restore sound
3	NUMERIC KEY	TV selection or input number
4	INFO	Screen Display Information
5	E.S	ECO, press this button will enter the energy-saving mode, Turn off screen displaying, only keep audio output, press the button again will resume normal screen displaying.
6	INPUT	Enter or select source channel
7	MENU	Enter or exit from the menu
8	CONTROL KEY	Select Up/Down/Left/Right and the selection
9	SLEEP	Sleep: Set a timer to turn off the touch screen
10	EXIT	Press this button to exit current status
11	VOL+/-	VOL+ / VOL- to adjust volume level
12	CH+/-	Menu up and down select
13	P.Mode	Adjust picture mode
14	S.Mode	Adjust sound mode
15	N/A	
16	FREEZE	Freeze/unfreeze the display and sound (only work under VGA/HDMI source)

NO.	NAME	DESCRIPTION
17	TOUCH BUTTON	Turn on/off touch and front key
18	PLAY/PAUSE	Play audio/video or pause audio/video
19	STOP	Stop the audio/video play
20	PREVIOUS/NEXT	Select previous or next file
21	FORWARD/REWIND	Forward or Rewind the audio/video
22	PRSRN	Press this button to automatically screen shot the current displaying screen, and save to SCREENSHOT folder
23	CHLLST	N/A
24	HOME	Back to Android Home page
25	L.S (LIGHT SENSOR)	light-sensitive, turn on/off the environment light sensitive function, when turn on, the screen brightness will change automatically according the environment light change
26	ZOOM	display ratio selection, support 16:9, 4:3, Auto, full screen, just scan, 14:9, dot to dot, default (if the touch screen without android system, this button is FAV) FAV—display the collection TV list
27	TV	back to TV channel (if device without TV tuner, this button not work, if touch screen without android system, it's for IMENU on/off)